


Engineering Data
AC Servo Actuators RSF Mini



Harmonic
Drive AG

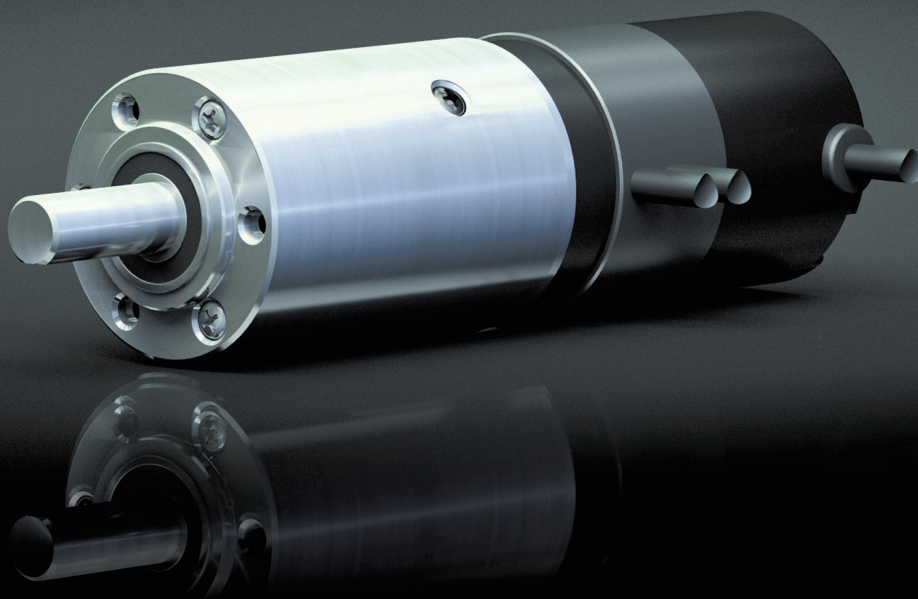

QUICKLINK

www.harmonicdrive.de/1060

Contents

Section 1 - RSF-3C/RSF-5B

SAFETY GUIDE

- NOTATION
- LIMITATION OF APPLICATIONS
- SAFETY NOTE

Contents

Chapter 1 Overview of the RSF supermini Series

- 1-1 Overview of RSF supermini Series
- 1-2 Major characteristics
- 1-3 Ordering information
 - Actuator Model
- 1-4 Combinations with drivers
- 1-5 Specifications of RSF supermini actuators
- 1-6 External dimensions of actuators
- 1-7 One-way positioning accuracy
- 1-8 Torsional stiffness
- 1-9 Detector resolution
- 1-10 Mechanical accuracy
- 1-11 Allowable load
 - Allowable radial load and allowable thrust load
 - Radial load when the operating point is different
- 1-12 Rotary direction
- 1-13 Impact resistance
- 1-14 Vibration resistance
- 1-15 Operable range
- 1-16 Cable specifications

Chapter 2 Selection of the RSF supermini Series

- 2-1 Allowable load moment of inertia
- 2-2 Variable load inertia
- 2-3 Verifying loads
- 2-4 Examining operating status
 - Examining actuator rotation speed
 - Calculating and examining load inertia moment
 - Calculating load torque
 - Acceleration time and deceleration time
 - Examining duty
 - Examining effective torque and average rotational speed
 - Permissible overloaded time

Chapter 3 Installing the actuator

- 3-1 Receiving inspection
- 3-2 Notice on handling
- 3-3 Location and installation
 - Environment of location
 - Considerations into External Noise
 - Installation

Chapter 4 Motor shaft retention brake(RSF-5B)

- 4-1 Motor shaft retention brake specifications
- 4-2 Controlling the brake power supply
 - Using a relay cable (Recommended method)
 - Not using a relay cable

Chapter 5 Options

- 5-1 Relay cables
- 5-2 Relay cable wire bound specifications
- 5-3 Connectors

Appendix

- A-1 Conversion of unit
- A-2 Moment of inertia
 - 1. Calculation formulas for mass and moment of inertia
 - 2. Moment of inertia of circular cylinder

Section 2 - RSF-8B/-11B/-14B

SAFETY GUIDE

- NOTATION
- LIMITATION OF APPLICATIONS
- SAFETY NOTE

Contents

Chapter 1 Overview of the RSF-B mini series

- 1-1 Major characteristics
- 1-2 Ordering information
- 1-3 Combinations with drivers
- 1-4 Specifications of RSF supermini actuators
- 1-5 External dimensions of actuators
- 1-6 Mechanical accuracy
- 1-7 One-way positioning accuracy
- 1-8 Torsional stiffness
- 1-9 Detector resolution
- 1-10 Allowable load
 - 1-10-1 Allowable radial load and allowable thrust load
 - 1-10-2 Radial load when the operating point is different
- 1-11 Rotary direction
- 1-12 Impact resistance
- 1-13 Vibration resistance
- 1-14 Torque-speed characteristics
- 1-15 Cable specifications

Chapter 2 Installing the actuator

- 2-1 Receiving Inspection
- 2-2 Notice on handling
- 2-3 Location and installation
 - 2-3-1 Environment of location
 - 2-3-2 Installation

Chapter 3 Options

- 3-1 Relay cables
- 3-2 Connectors

Appendix



- Appendix 1 Unit conversion
- Appendix 2 Moment of inertia
 - 1. Calculation of mass and moment of inertia
 - 2. Moment of circular cylinder inertia

Harmonic Drive[®]

AC Servo Actuator

RSF supermini Series Manual

(With RSF-3C and RSF-5B)

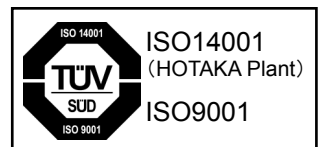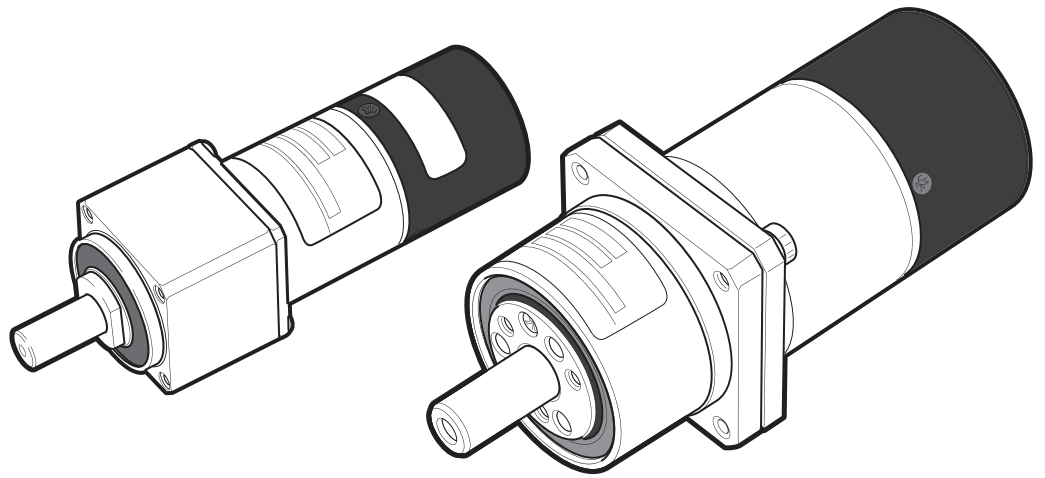

Introduction

Thank you very much for your purchasing our RSF supermini series servo actuator.

Be sure to use sufficient safety measures when installing and operating the equipment so as to prevent an accident resulting in a serious physical injury damaged by a malfunction or improper operation.

Product specifications are subject to change without notice for improvement purposes.

Keep this manual in a convenient location and refer to it whenever necessary in operating or maintaining the units.



The end user of the actuator should have a copy of this manual.

SAFETY GUIDE

To use the servo system safely, be sure to read SAFETY GUIDE and other parts of this document carefully and fully understand the information provided herein before using the driver.

NOTATION

Important safety information you must note is provided herein. Be sure to observe these instructions.


 <p>WARNING</p>	Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious personal injury.
 <p>CAUTION</p>	Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate personal injury and/or damage to the equipment.

LIMITATION OF APPLICATIONS

The equipment listed in this document may not be used for the applications listed below:

- Space equipment
- Aircraft, aeronautic equipment
- Nuclear equipment
- Household apparatus
- Vacuum equipment
- Automobile, automotive parts
- Amusement equipment
- Machine or devices acting directly on the human body
- Instruments or devices to transport or carry people
- Apparatus or devices used in special environments
- Instruments or devices to prevent explosion

If the above list includes your intending application for our products, please consult us.

 <p>CAUTION</p>	If this product is utilized in any facility in which human life is at stake or that may incur material losses, install safety devices so that accidents will not occur even when the output control is disabled due to damage.
--	---

SAFETY NOTE

Precautions when using a direct drive motor

● NOTICES ON DESIGN

BE SURE TO READ THE MANUAL FOR DESIGNING.



Always use under followings conditions:

The motor is designed to be used for indoor.

- Ambient temperature: 0°C to 40°C
- Ambient humidity: 20% to 80%RH (Non-condensation)
- Vibration: 49 m/s² or less
- No contamination by water, oil
- No metal powder, dust, oil mist, corrosive gas, or explosive gases

Follow exactly the instructions to install the actuator in the equipment.

- Ensure exact alignment of motor shaft center and corresponding center in the application.
- Failure to observe this caution may lead to vibration, resulting in damage of output shaft.

● OPERATIONAL PRECAUTIONS

BE SURE TO READ THE MANUAL BEFORE OPERATING THE PRODUCT.



Never connect cables directly to a power supply socket.

- Direct drive motor cannot be operated unless it is connected to dedicated driver.
- Never connect it to commercial power supply directly. Direct drive motor may be damaged and causes fire.

Do not apply shocks to actuator.

- Do not apply shocks because direct drive motor is directly connected to high precision encoder.
- If the encoder is damaged, it may cause uncontrollable operation.

Avoid handling of motor by cables.

- Failure to observe this caution may damage the wiring, causing uncontrollable or faulty operation of direct drive motor.



Keep limited torques of the actuator.

- Keep limited torques of the actuator.
- Be aware that, if arms directly attached to the output shaft are hit, the output shaft may become non-controllable.

Precautions when using a driver

● NOTICES ON DESIGN

BE SURE TO READ THE MANUAL FOR DESIGNING.



Always use drivers under followings conditions:

The driver generates heat. Take extra caution for radiation and use it under the following conditions.

- Mount in a vertical position keeping sufficient distance.
- 0 to 50°C, 95% RH or below (Non condensation)
- No vibration or shocks
- No metal powder, dust, oil mist, corrosive gas, or explosive gases

Use sufficient noise suppressing means and safe grounding.

Any noise generated on a signal wire will cause vibration or improper motion. Be sure to observe the following conditions.

- Keep signal and power leads separated.
- Keep leads as short as possible.
- Ground actuator and driver at one single point, minimum ground resistance class: D (less than 100 ohms)
- Do not use a power line filter in the motor circuit.

Pay attention to negative torque by inverse load.

- Inverse load may cause damages of direct drive motor.
Please consult our sales office, if you intend to apply products for inverse load.


Use a fast-response type ground-fault detector designed for PWM inverters.


When using a fast-response type ground-fault detector, use one that is designed for PWM inverters. Do not use a time-delay-type ground-fault detector.

If this product is utilized in any facility in which human life is at stake or that may incur material losses, install safety devices so that accidents will not occur even when the output control is disabled due to damage.

● **OPERATIONAL PRECAUTIONS**


BE SURE TO READ THE MANUAL BEFORE OPERATING THE PRODUCT.

 <p>WARNING</p>	<p>Never change wiring while power is active. Make sure to turn OFF the power before detaching wires, or disconnecting or connecting the connectors. Failure to observe this caution may result in electric shock or uncontrollable operation.</p> <p>Do not touch terminals immediately after turning OFF power.</p> <ul style="list-style-type: none">- Even after the power supply is turned OFF, electric charge remains in the driver. To prevent electric shock, perform an inspection upon confirming that the charge voltage monitor LED on the panel is turned OFF after the power is turned off.- Make installation of products not easy to touch their inner electric components.
---	---

 <p>CAUTION</p>	<p>Do not make a voltage resistance test.</p> <ul style="list-style-type: none">- Do not perform a megger test or voltage resistance test. Failure to observe this caution may result in damage to the control circuit of the driver. Please consult our sales office, if you intent to make a voltage resistance test. <p>Do not operate control units by means of power ON/OFF switching.</p> <ul style="list-style-type: none">- Frequent power ON/OFF may result in deterioration of internal circuit elements.- Start/stop operation should be performed via input signals.
---	---

● **DISPOSAL**

DISPOSAL OF AN ACTUATOR AND/OR A DRIVER

 <p>CAUTION</p>	<p>All products or parts have to be disposed of as industrial waste. Dispose of these items as industrial waste.</p>
---	---

Contents

SAFETY GUIDE	1
NOTATION.....	1
LIMITATION OF APPLICATIONS.....	1
SAFETY NOTE.....	2
Contents	5

Chapter 1 Overview of the RSF supermini Series

1-1 Overview of RSF supermini Series	1-1
1-2 Major characteristics	1-1
1-3 Ordering information	1-2
Actuator Model.....	1-2
1-4 Combinations with drivers	1-2
1-5 Specifications of RSF supermini actuators.....	1-3
1-6 External dimensions of actuators	1-5
1-7 One-way positioning accuracy	1-7
1-8 Torsional stiffness	1-8
1-9 Detector resolution.....	1-9
1-10 Mechanical accuracy	1-9
1-11 Allowable load.....	1-10
Allowable radial load and allowable thrust load	1-10
Radial load when the operating point is different	1-11
1-12 Rotary direction.....	1-12
1-13 Impact resistance.....	1-12
1-14 Vibration resistance	1-12
1-15 Operable range.....	1-13
1-16 Cable specifications	1-15

Chapter 2 Selection of the RSF supermini Series

2-1 Allowable load moment of inertia	2-1
2-2 Variable load inertia	2-1
2-3 Verifying loads.....	2-1
2-4 Examining operating status.....	2-2
Examining actuator rotation speed	2-2
Calculating and examining load inertia moment	2-2
Calculating load torque	2-2
Acceleration time and deceleration time	2-3

Examining duty	2-4
Examining effective torque and average rotational speed	2-8
Permissible overloaded time	2-9

Chapter 3 Installing the actuator

3-1 Receiving inspection	3-1
3-2 Notice on handling	3-2
3-3 Location and installation	3-3
Environment of location	3-3
Considerations into External Noise	3-3
Installation.....	3-4

Chapter 4 Motor shaft retention brake(RSF-5B)

4-1 Motor shaft retention brake specifications.....	4-1
4-2 Controlling the brake power supply	4-2
Using a relay cable (Recommended method).....	4-2
Not using a relay cable	4-2

Chapter 5 Options

5-1 Relay cables	5-1
5-2 Relay cable wire bound specifications	5-2
5-3 Connectors	5-3

Appendix

A-1 Conversion of unit	A-1
A-2 Moment of inertia	A-3
1. Calculation formulas for mass and moment of inertia	A-3
2. Moment of inertia of circular cylinder	A-5

Chapter 1

Overview of the RSF supermini Series

Outlines of servo actuator models, specifications, external dimensions, etc., are explained in this chapter.

1-1	Overview of RSF supermini Series	1-1
1-2	Major characteristics	1-1
1-3	Ordering information	1-2
1-4	Combinations with drivers	1-2
1-5	Specifications of RSF supermini actuators	1-3
1-6	External dimensions of actuators	1-5
1-7	One-way positioning accuracy	1-7
1-8	Torsional stiffness	1-8
1-9	Detector resolution	1-9
1-10	Mechanical accuracy	1-9
1-11	Allowable load	1-10
1-12	Rotary direction	1-12
1-13	Impact resistance	1-12
1-14	Vibration resistance	1-12
1-15	Operable range	1-13
1-16	Cable specifications	1-15

1-1 Overview of RSF supermini Series

The RSF supermini series are ultra-small AC servo actuators combining ultra-precision control deceleration device Harmonic Drive® that provides precision rotation operation at a high torque with ultra-small AC servo motor developed to make use of the performance of the decelerator.

Actuators with an electromagnetic brake are also included in the lineup. They can meet fail-safe requirements of equipment to prevent accidents upon power supply failure.

The dedicated servo driver HA-680 is an AC servo driver for 24VDC power supply. The small and multi-functional HA-680 driver is equipped with position control, speed control, and torque control as standard to control operation of the RSF supermini series correctly and precisely.

The RSF supermini series can contribute to downsizing of driving of robot joints, semiconductor/LCD panel manufacturing equipment, machine tools, and other FA equipment. By utilizing its small and high-torque characteristics, it can also be used for small equipment and for research.

1-2 Major characteristics

Small, lightweight, and high-torque

The RSF supermini series with the precision-control deceleration device Harmonic Drive® realizes a high torque and has a very high output torque for the outer dimensions compared to the direct driving method with a high-capacity motor alone.

Also, combination with the dedicated AC servo motor realizes size and weight reduction that are never possible before.

Standard lineup of actuators with a brake (only RSF-5B)

The standard lineup of AC servo actuators includes the deenergisation operation type actuators with an electromagnetic brake for the first time for this size of actuators.

Fail-safe requirements of equipment can be met to prevent accidents upon power failure without providing any external brake or changing the equipment structure to install a brake.

Superior positioning precision

The characteristics of the control deceleration device Harmonic Drive® such as non-backlash and superior positioning precision realize high-precision mechanisms.

Stable controllability

The high deceleration gear ratio of the control deceleration device Harmonic Drive® provides stable controllability for large variations of load moment of inertia.

1-3 Ordering information

Model codes for the RSF supermini series actuators are as follows:

Actuator Model

RSF-5 B-50-E 050-C-SP

Model: AC servo actuator
Series: RSF series

Frame size: 3 or 5

Design version

Reduction ratio of Harmonic Drive®

30: 1/30
50: 1/50
100: 1/100

Encoder specifications
E: incremental encoder

Encoder pulses on motor shaft
020: 200p/rev (Model 3)
050: 500p/rev (Model 5)

Option

C: With connector (Standard product)
BC: (model No. 5 only): With break or connector
No symbol: No option available

Special specification

No symbol: Standard product
SP: Special product

1-4 Combinations with drivers

The RSF supermini series actuators are used in combination with the HA-680-4B-24 driver.

The HA-680 driver can perform position control, speed control, and torque control.

For details of the driver, refer to "AC Servo Driver for 24VDC Power Supply HA-680 Series Technical Data."

The optional relay cable is required for connection between the actuator and the driver.

1-5 Specifications of RSF supermini actuators

Specifications of actuators are as follows:

Time rating:	Continuous	Service temperature:	0~40°C
Excitation method:	Permanent magnet type	Storage temperature:	-20~+60°C
Insulation class:	B	Humidity (Operating/Storage)	20~80%RH (no condensation)
Withstanding voltage:	AC500V/min	Vibration resistance:	49m/s ² (10-400Hz)
Insulation resistance:	DC500V 100MΩ or more	Shock resistance	300m/s ²
Structure:	Totally enclosed self cooling type	Lubricant:	Grease (Harmonic Grease)

Item	Model	RSF-3C			RSF-5B		
		30	50	100	30	50	100
Power supply voltage(diver)	V	DC24±10%			DC24±10%		
Allowable continuous current	A	0.65	0.66	0.56	1.11	0.92	0.76
Allowable continuous torque (during operation at allowable continuous rotation speed)	Nm	0.03	0.07	0.11	0.18	0.29	0.44
	kgfcm	0.31	0.68	1.08	1.83	2.95	4.48
Allowable continuous rotation speed (output shaft)	r/min	150	90	45	150	90	45
Allowable continuous stall torque	Nm	0.04	0.08	0.12	0.28	0.44	0.65
	kgfcm	0.41	0.82	1.22	2.85	4.48	6.62
Instantaneous maximum current	A	1.5	1.4	1.1	2.3	2.2	1.7
Max. torque	Nm	0.13	0.21	0.30	0.5	0.9	1.4
	kgfcm	1.27	2.05	2.94	5.1	9.17	14.3
Max. speed	r/min	333	200	100	333	200	100
Torque constant	Nm/A	0.11	0.18	0.40	0.3	0.54	1.1
	kgfcm/A	1.12	1.84	4.08	3.06	5.51	11.22
MEF constant	V/(r/min)	0.015	0.025	0.05	0.04	0.07	0.13
Phase resistance (at 20°C)	Ω	1.34			0.82		
Phase inductance	mH	0.18			0.27		
Moment of inertia Note 4	GD ² /4 kgm ²	0.11×10 ⁻⁴	0.29×10 ⁻⁴	1.17×10 ⁻⁴	0.66×10 ⁻⁴ (0.11×10 ⁻³)	1.83×10 ⁻⁴ (0.31×10 ⁻³)	7.31×10 ⁻⁴ (1.23×10 ⁻³)
	J kgfcms ²	1.07×10 ⁻⁴	2.98×10 ⁻⁴	11.90×10 ⁻⁴	0.67×10 ⁻³ (1.13×10 ⁻³)	1.87×10 ⁻³ (3.15×10 ⁻³)	7.45×10 ⁻³ (12.6×10 ⁻³)
Gear ratio		30	50	100	30	50	100
Allowable radial load (output shaft central value)	N	36			90		
	kgf	3.6			9.1		
Allowable thrust load	N	130			270		
	kgf	13.2			27.5		

Item		Model	RSF-3C			RSF-5B		
			30	50	100	30	50	100
Encoder pulses (motor shaft)		Pulse/	200			500		
Encoder resolution (Output shaft: when multiplied by 4) Note 5		Pulse/ Rotation	24,000	40,000	80,000	60,000	100,000	200,000
Motor shaft brake	Input power supply voltage	V	—			DC24±10%		
	Retention torque	Nm	—			0.18	0.29	0.44
		kgfcm	—			1.83	2.95	4.48
Mass Note 6	Without brake	g	31 (except clamp filter)			66 (except clamp filter)		
	With brake	g	—			86 (except clamp filter)		
Combined driver			HA-680-4B-24			HA-680-4B-24		

Note 1: The table shows typical output values of actuators.

Note 2: the values in the table above are obtained when it is combined with the combined driver (HA-680-4B-24).

Note 3: All values are typical.

Note 4: The moment of inertia is the total value of the motor shaft and Harmonic Drive moment of inertia values converted to the output side. The values in parentheses are for equipment with a brake.


Note 5: The encoder resolution is (motor shaft encoder resolution when multiplied by 4) x (gear ratio).

Note 6: The mass of clamp filter is 6g for each.

1-6 External dimensions of actuators


The external drawings are shown as follows:

RSF-3C-XXX-E020-C

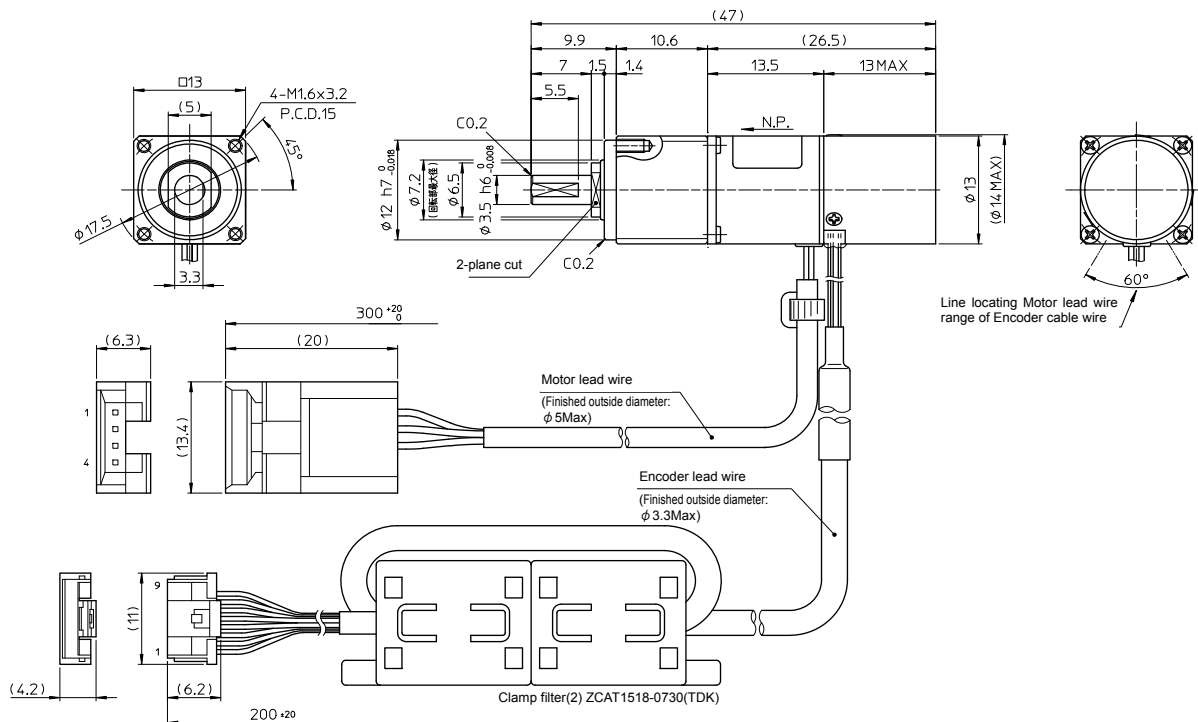


Note) For detailed external dimensions, check the delivery specification drawing issued by us.

RSF-5B-XXX-E050-C

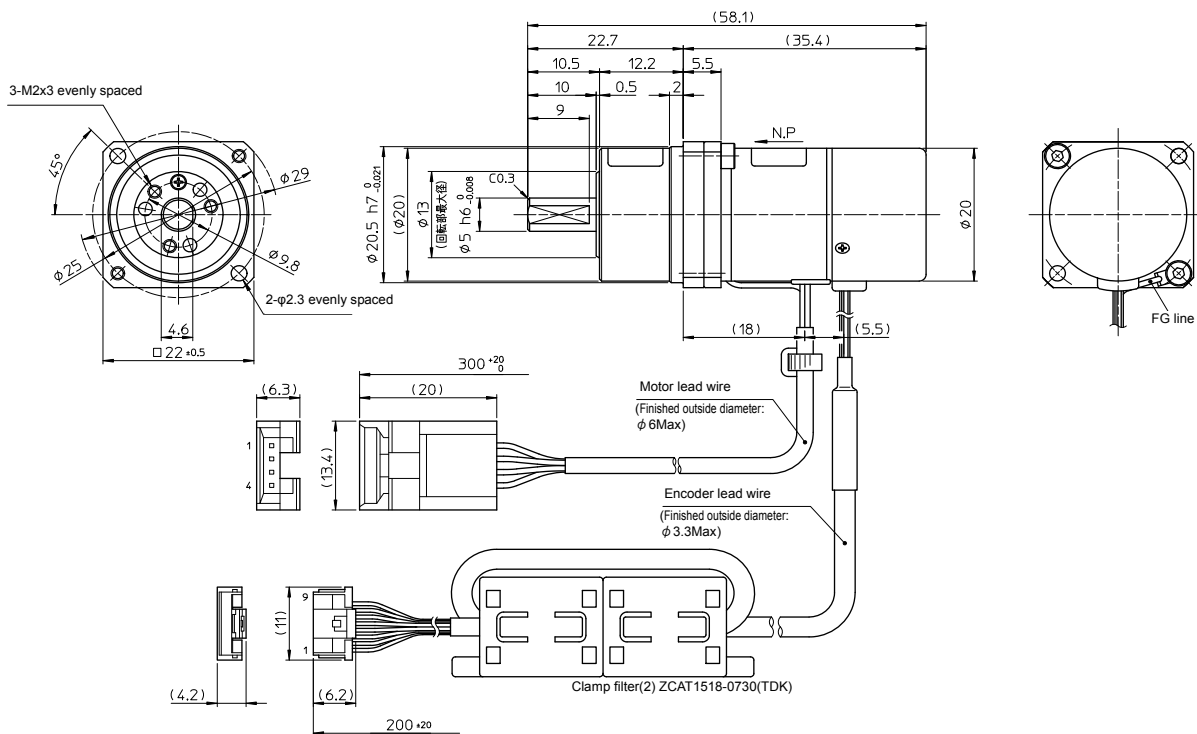

RSF-5B-XXX-E050-BC(with brake)

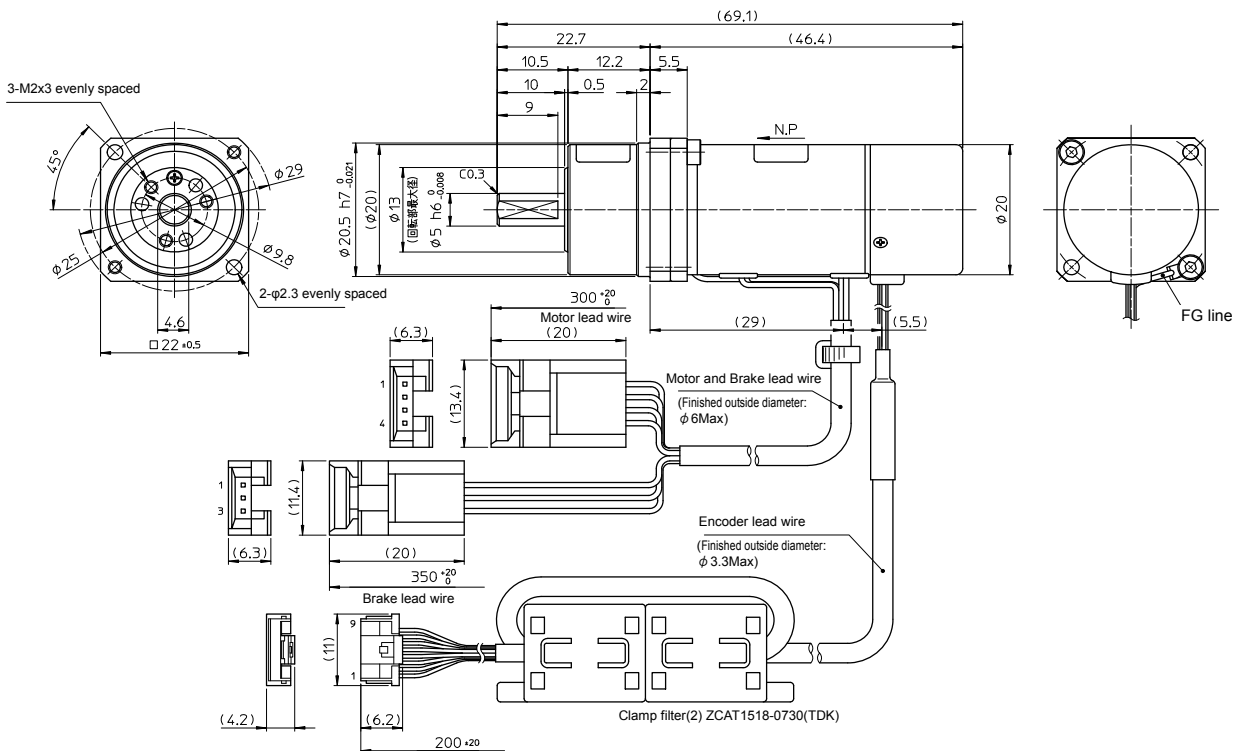

Note) For detailed external dimensions, check the delivery specification drawing issued by us.

1-7 One-way positioning accuracy

The following table shows the "one-way positioning accuracy."

The following table contains representing values.

RSF supermini series actuators house the speed reducer harmonic drive for precision control, positioning errors of the motor shaft are compressed by reduction ratio to 30, 50 or 100. Actually, the angle transmission error of the speed reducer determines the positional accuracy. As a result, the measured angle transmission error of the speed reducer is indicated as the positional accuracy of the RSF supermini series.

The accuracy for each gear ratio is shown below.


Model		RSF-3C			RSF-5B		
Item	Gear ratio	30	50	100	30	50	100
		One-way positioning accuracy	arc min	10			4
	rad	2.9×10^{-3}			1.20×10^{-3}	0.87×10^{-3}	0.87×10^{-3}

Reference

(Accuracy display and measurement method according to JIS B 6201: 1987)

- **One-way positioning of rotation shaft motion**


First, perform positioning at any one position in a fixed direction. This position is the reference position. Next, perform positioning in succession in the same direction, and measure the difference between the angle actually rotated from the reference position and the desired angle at each position. The maximum difference in one rotation among these values is taken as the measurement value. Measurement of equipment with the continuous positioning function for rotational motion shall be done once per 30 degrees or 12 positions throughout the entire rotation range as a rule.

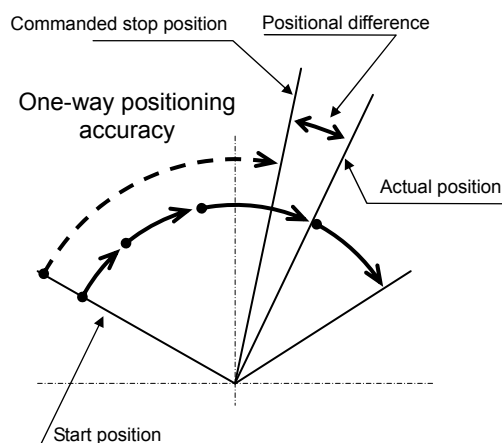

1-8 Torsional stiffness

When a torque is applied to the output flange of the actuator with the motor locked, the resulting torsional wind up is near proportional to the torque.

The upper right figure shows the torsional stiffness characteristics of the output flange applying torque starting from zero to plus side [+T₀] and minus side [-T₀]. This trajectory is called torque-torsion characteristics which typically follows a loop 0→A→B→A'→B'→A as illustrated. The torsional stiffness of the RSF supermini actuator is expressed by the slope of the curve that is a spring rate (wind-up) (unit:N·m/rad).

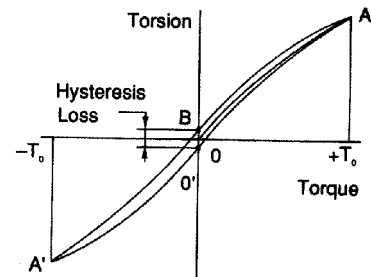

The torsional stiffness may be evaluated by dividing torque-torsion characteristics curve into three major regions. The spring rate of each region is expressed K₁, K₂, and K₃ respectively.


K₁: spring rate for torque region 0-T₁

K₂: spring rate for torque region T₁-T₂

K₃: spring rate for torque region over T₂

The wind-up for each region is expressed as follows:

- wind-up for torque region 0-T₁: $\varphi = \frac{T}{K_1}$
- wind-up for torque region T₁-T₂: $\varphi = \theta_1 + \frac{T - T_1}{K_2}$
- wind-up for torque region over T₂: $\varphi = \theta_2 + \frac{T - T_2}{K_3}$

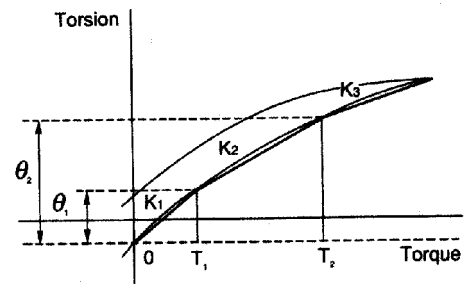

The following table shows average values of T₁ through T₃, K₁ through K₃, and θ₁ through θ₂ for different gear ratios.

Model		RSF-3C			RSF-5B		
Gear ratio		30	50	100	30	50	100
Symbol							
T ₁	Nm	0.016	0.016	0.016	0.075	0.075	0.075
	kgfm	0.0016	0.0016	0.0016	0.0077	0.0077	0.0077
K ₁	Nm/rad	27	30	34	90	110	150
	kgfm/arc min	0.0008	0.0009	0.0010	0.003	0.003	0.004
θ ₁	x10 ⁻⁴ rad	5.9	5.3	4.7	8.7	6.9	5
	arc min	2.0	1.8	1.6	3	2.4	1.7
T ₂	Nm	0.05	0.05	0.05	0.22	0.22	0.22
	kgfm	0.005	0.005	0.005	0.022	0.022	0.022
K ₂	Nm/rad	40	47	54	110	140	180
	kgf m/arc min	0.0012	0.0014	0.0016	0.003	0.004	0.005
θ ₂	x10 ⁻⁴ rad	12.5	10.6	9.3	22	18	13
	arc min	4.2	3.6	3.1	7.5	6	4.4
K ₃	Nm/rad	51	57	67	120	170	200
	kgfm/arc min	0.0015	0.0017	0.0020	0.004	0.005	0.006


1-9 Detector resolution

The motor part of the RSF supermini series actuator is equipped with a 200-pulse/revolution encoder (model No. 3) or a 500-pulse/revolution encoder (model No. 5), and the motor output speed is reduced to 1/30, 1/50 or 1/100 using the speed reducer harmonic drive for precision control. Accordingly, the resolution per a single revolution of the actuator output shaft is 30, 50 or 100 times the encoder pulse (motor shaft). In addition, the encoder signal is electrically multiplied by 4. The resolution of the output shaft at each reduction ratio is shown in the table below.

Model		RSF-3C			RSF-5B		
Gear ratio		30	50	100	30	50	100
Detector resolution (when multiplied by 4)	Pulse/Rotation	24,000	40,000	80,000	60,000	100,000	200,000
Angle per one pulse	Angle second (arc sec)	54	32.4	16.2	21.6	12.96	6.48

1-10 Mechanical accuracy

The machining accuracy of the output flange and the mounting flange of RSF supermini actuators are indicated in the table below.

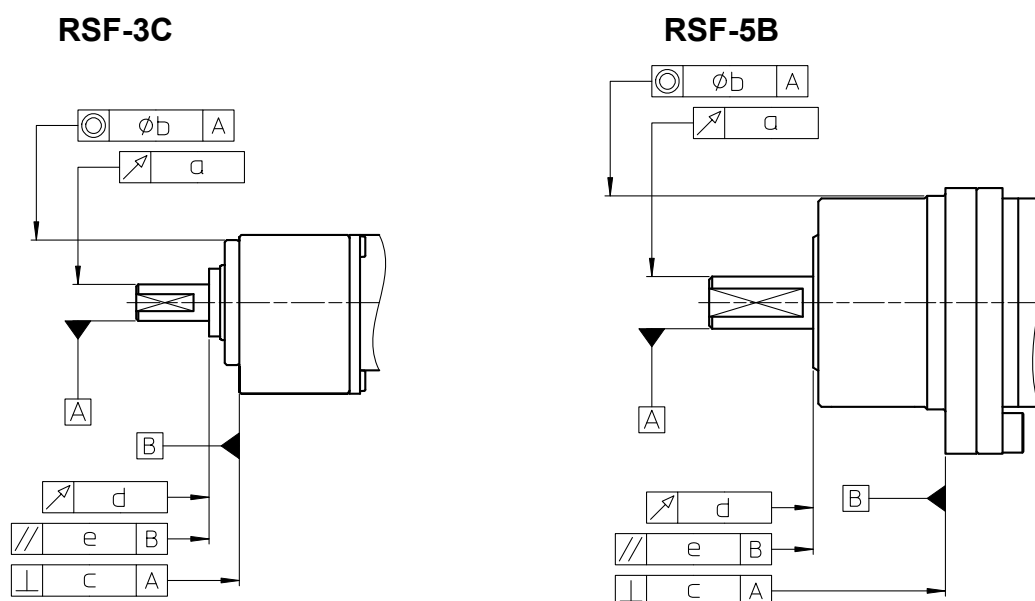

Machined accuracy of the output flange

* T.I.R. unit: mm

Symbol	Machined parts	Accuracy value	
		RSF-3C	RSF-5B
a	Runout of the tip of the output shaft	0.03	0.03
b	Concentricity of installed spigot joint	0.02	0.04
c	Squareness of installation surface	0.02	0.02
d	Output flange surface contact	0.005	0.005
e	Parallelism of installation surface and output flange	0.015	0.015

*) T.I.R.(Total Indicator Reading): Indicates the total amount of dial gage reading when the measurement unit is rotated once.

1-11 Allowable load

1

Overview of the RSF supermini series

Allowable radial load and allowable thrust load


The gear head used in the RSF supermini series incorporates the high-precision 4-point contact ball bearing for direct support of external load (output part).

The allowable radial load and thrust load of the output shaft are shown below.

The allowable radial load F_r is obtained with respect to the center ($L/2$) 0 point of the output shaft.

The values in the following table are designed by considering the life of the bearing.

The allowable values must not be exceeded.

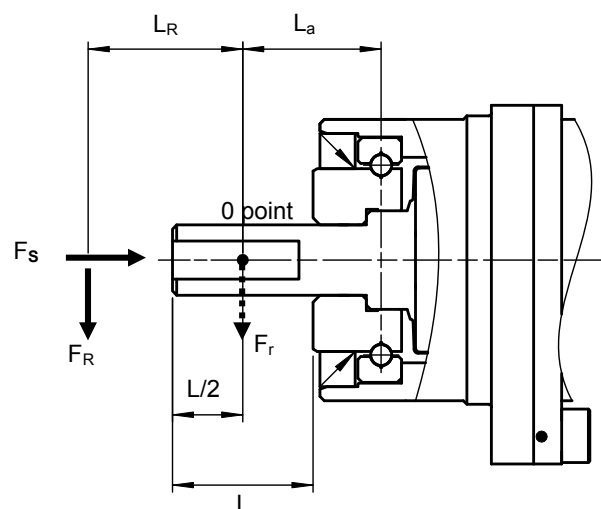

Model	Unit	RSF-3C	RSF-5B
Allowable radial load (F_r)	N	36	90
	kgf	3.6	9.1
Allowable thrust load (F_s)	N	130	270
	kgf	13	27

Radial load when the operating point is different

If the operating point of radial load is different, the allowable radial load value is also different. The relation between radial load position L_R and allowable radial value F_R is obtained from the following formula.

The allowable values must not be exceeded.

$$F_R = \frac{L_a}{L_a + L_R} F_r$$

F_R	Allowable radial load at distance L_R from the 0 point [N]
F_r	Allowable radial load at the 0 point [N]
L_a	Distance from the bearing starting point to the 0 point [mm]
L_R	Distance from the position where radial load is exerted to the 0 point [mm]
L	Shaft length [mm]

Model		RSF-3C	RSF-5B
Allowable radial load (F_r)	N	36	90
	kgf	3.6	9.1
L_a	mm	8.6	9.85
L	mm	7	10

1-12 Rotary direction

The rotary direction of the RSF supermini series actuators when a forward rotation command is given from the HA-680 driver is forward rotation seen from the output shaft side (i.e. clockwise: CW).


The rotary direction of the HA-680 can be switched by using the Parameter → “20: Rotary direction command” setting.

“20: Rotary direction command” setting

Value	FWD command	REV command	Setting
0	FWD rotation	REV rotation	Default
1	REV rotation	FWD rotation	

* The model shape is RSF-5B. RSF-3C is also the same.

* For details of the driver, refer to “AC Servo Driver HA-680 Series Technical Data.”

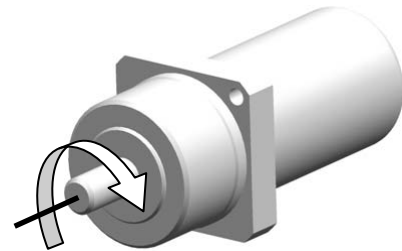

FWD: CW rotation

1-13 Impact resistance


The impact resistance of the actuators is as follows.

Impact acceleration: 300 m/s²

Direction: top/bottom, right/left, front/back

Repeating times: three

However, do not apply impact to the output shaft.

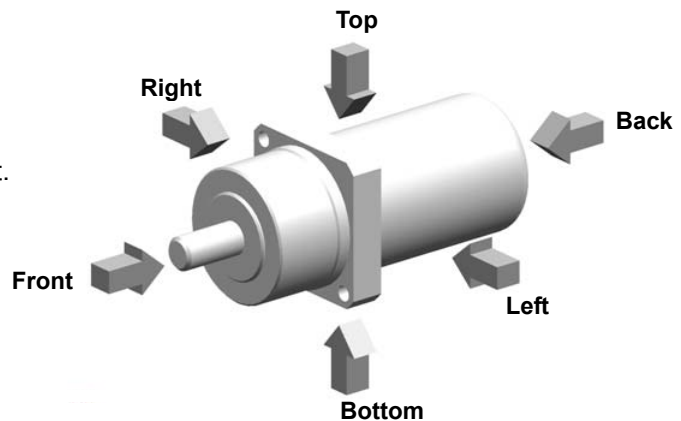

Impact resistance


1-14 Vibration resistance

The vibration resistance of the actuators for up/down, left/right, and front/back is as follows.

Vibration acceleration: 49m/s² (5G)

Frequency: 10 to 400Hz

This specification does not guarantee fretting wear of mechanism components due to micro vibrations.

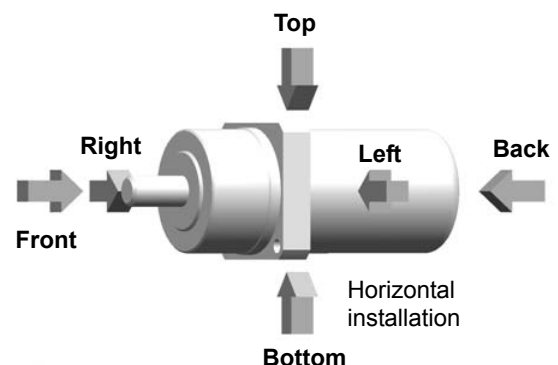


Vibration resistance

1-15 Operable range


The following graphs show the usable ranges of the RSF supermini series actuators.

- Acceleration and deceleration range:
This range indicates the torque rotation speed at which the product can be operated at this instant. The range is typically used for acceleration or deceleration.
- Continuous duty range:
This range indicates the torque rotation speed at which the actuator can be operated continuously.
- 50% duty range:
This range indicates the torque rotation speed at which the actuator can be operated at 50% duty operation (the ratio of operating time and delay time is 50:50).


RSF-3C-30-E020-C

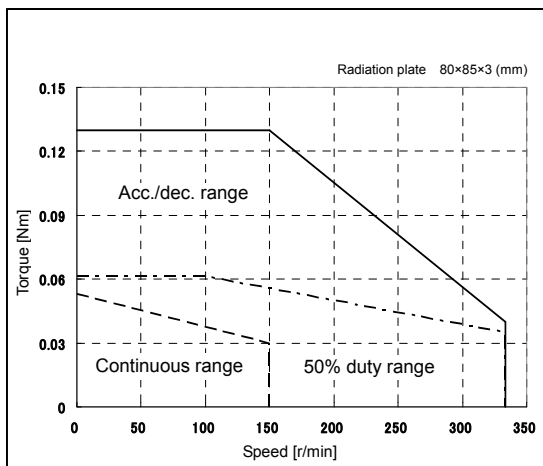

RSF-3C -50-E020-C

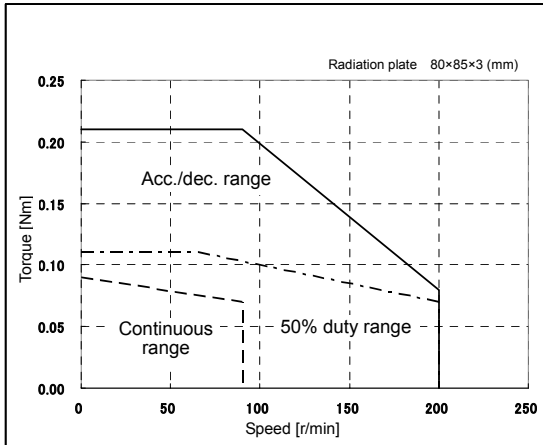


RSF-3C -100-E020-C

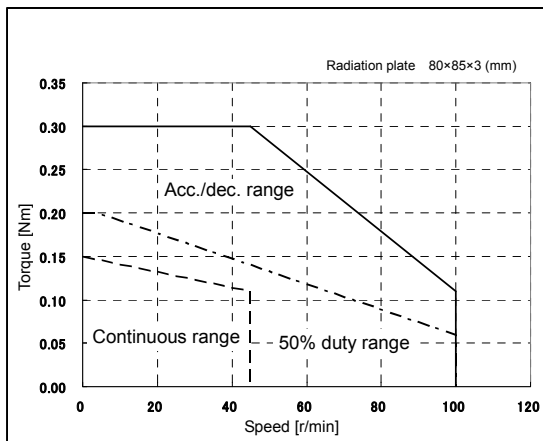


Note: The values of the graph are obtained when the aluminum radiation plate shown at the upper right of the graph.
 Note: If it is used continuously in one direction, please consult with us.


RSF-5B-30-E050-C, RSF-5B-30-E050-BC

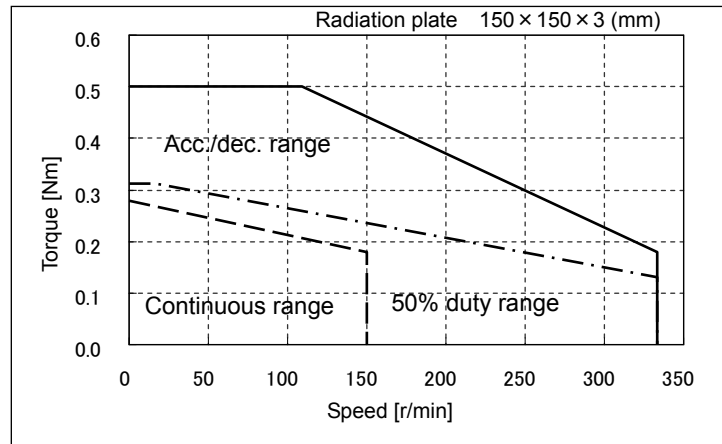

RSF-5B-30-E050-C, RSF-5B-50-E050-BC

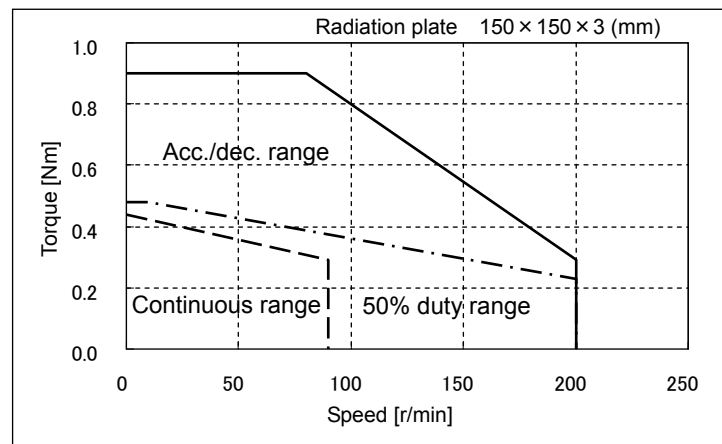

RSF-5B-30-E050-C, RSF-5B-100-E050-BC

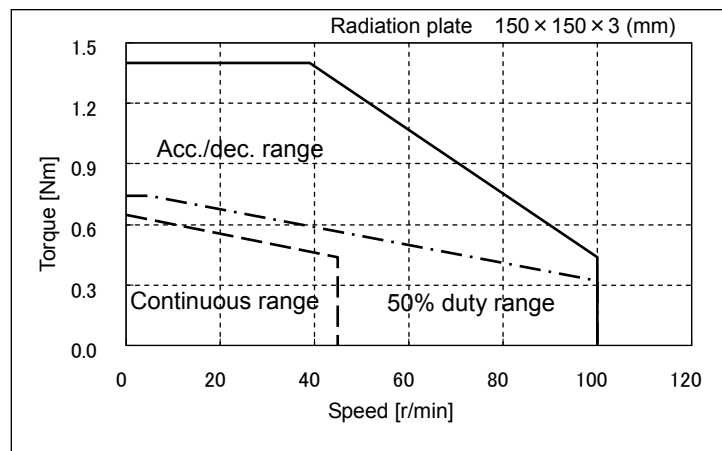

Note: The values of the graph are obtained when the aluminum radiation plate shown at the upper right of the graph.
 Note: Even in the continuous range, if it is used continuously in one direction, please consult with us.

1-16 Cable specifications

The following tables show specifications of motor lead wires, brake lead wires and encoder lead wires of the RSF supermini actuators.

Motor cable

Pin No.	Color	Signal name	Remark
1	Red (RED)	U	Motor phase-U
2	White (WHT)	V	Motor phase-V
3	Black (BLK)	W	Motor phase-W
4	Green (GRN)	FG	Grounding *RSF-5B only

Connector used	Housing:	PALR-04VF (with retainer)
	Contact:	S(B)PAL-001T-P0.5
Recommended connector	Housing:	PARP-04V (with retainer)
	Contact:	S(B)PA-001T-P0.5

Manufactured by J.S.T. Mfg Co., Ltd

Brake lead wire

Pin No.	Line color
1	Blue (BLU)
2	Yellow (YEL)
3	Gray (GRY)

Connector used	Housing:	PALR-03VF (with retainer)
	Contact:	S(B)PAL-001T-P0.5
Recommended connector	Housing:	PARP-03V (with retainer)
	Contact:	S(B)PA-001T-P0.5

Manufactured by J.S.T. Mfg Co., Ltd

Encoder lead wire

Pin No.	Color	Signal name	Remark
1	White (WHT)	A	A phase output
2	Green (GRN)	B	B phase output
3	Yellow (YEL)	Z	Z phase output
4	Brown (BRW)	U	U phase output
5	Blue (BLU)	V	V phase output
6	Orange (ORG)	W	W phase output
7	Red (RED)	+5V	Power supply input
8	Black (BLK)	GND	Power supply input
9			

Connector used	Housing:	NSHR-09V-S
	Terminal:	SSHL-003T-P0.2

Manufactured by J.S.T. Mfg Co., Ltd

Chapter 2

Selection of the RSF supermini Series

This chapter explains how to select a proper RSF supermini series actuator.

2-1	Allowable load moment of inertia	2-1
2-2	Variable load inertia	2-1
2-3	Verifying loads	2-1
2-4	Examining operating status	2-2

2-1 Allowable load moment of inertia

To make full use of high precision and high performance of the RSF supermini series actuator, perform temporary selection by considering the load moment of inertia and rotation speed.

As a guideline, the load moment of inertia should be 3 to 5 times the moment of inertia of the actuator. For the moment of inertia of the actuator, refer to [1-5 Specifications of RSF supermini actuators] (P1-3).

For the method of calculating inertia moment, refer to [Appendix 2 Moment of inertia] (Page A-3).

The rotation speed cannot exceed the maximum rotation speed of the actuator. For the maximum rotation speed, refer to [1-5 Specifications of RSF supermini actuators] (P1-3).

2-2 Variable load inertia

RSF supermini series actuators include Harmonic Drive® gearing that has a high reduction ratio. Because of this there are minimal effects of variable load moment of inertias to the servo drive system. In comparison to direct servo systems this benefit will drive the load with a better servo response.

For example, assume that the load moment of inertia increases to N-times during its motion (for example, robot arms). The effect of the variable load moment of inertia to the [total inertia converted into motor shaft] is as follows:

The symbols in the formulas are:

J_s :	total moment of inertia converted into motor shaft	L :	Ratio of load moment of inertia to motor inertia
J_M :	moment inertia of motor		
R :	reduction ratio of RSF supermini series	N :	variation ratio of load moment of inertia

- Direct drive

$$\text{Before: } J_s = J_M(1+L) \quad \text{After: } J_s' = J_M(1+NL) \quad \text{Ratio: } J_s'/J_s = \frac{1+NL}{1+L}$$

- RSF supermini actuator drive

$$\text{Before: } J_s = J_M \left(1 + \frac{L}{R^2} \right) \quad \text{After: } J_s' = J_M \left(1 + \frac{NL}{R^2} \right) \quad \text{Ratio: } J_s'/J_s = \frac{1+NL/R^2}{1+L/R^2}$$

In the case of the RSF supermini series, this is an extremely large number, such as $R = 30$, $R = 50$ or $R = 100$, that is $R^2 = 900$, $R^2 = 2500$, or $R^2 = 10000$. The ratio is $J_s'/J_s \doteq 1$. This means that drive systems are hardly affected by the load moment of inertia variation. Therefore, it is not necessary to take the load moment of inertia variation in consideration for selecting an RSF supermini actuator or for setting up the HA-680 driver.

2-3 Verifying loads

The RSF supermini series incorporates a precision 4-point contact ball bearing for direct support of external load. To make full use of the performance of the RSF supermini series, check the maximum load moment, life of the 4-point contact ball bearing, and static safety factor.

For detailed calculation methods for the maximum load moment, life of the 4-point contact ball bearing, and static safety factor, refer to the "Harmonic Drive® CSF Mini series" catalogue.

2-4 Examining operating status

When the operation pattern (duty cycle) is such that the actuator starts and stops repeatedly, starting current and braking current flow through the motor at high frequency and the actuator generates heat. Accordingly, examine whether or not the generated heat can be accommodated. The study is as follows:


Examining actuator rotation speed

Calculate the required RSF supermini actuator speed (r/min) to drive the load.

For linear motion, convert with the formula below:

$$\text{Rotary speed (r/min)} = \frac{\text{Liner speed (mm/min)}}{\text{Pitch of screw(mm)}}$$

Select a reduction ratio from [30], [50] and [100] of an RSF supermini actuator of which the maximum speed is more than the required speed.

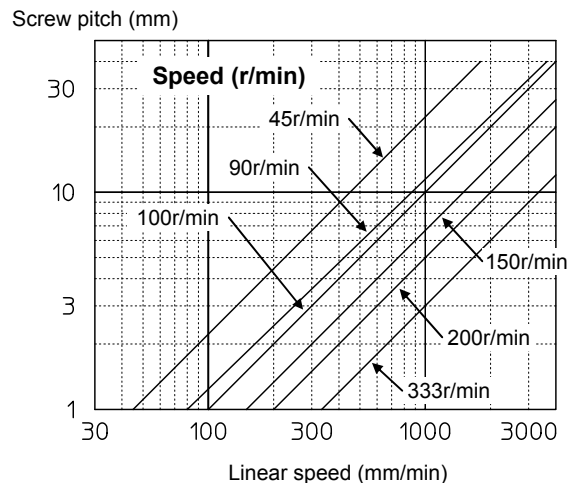

Calculating and examining load inertia moment

Calculate the load moment of inertia driven by the RSF supermini series actuator.

For the calculation methods, refer to [Appendix 1 Conversion of unit] (Page A-1).

Tentatively select an RSF supermini actuator referring to section [2-1 Allowable load moment of inertia] (P2-1) with the calculated value.

Calculating load torque


Calculate the load torque as follows:

- Rotary motion

The torque for the rotating mass [W] on the friction ring of radius [r] as shown in the figure to the right.

$$T = 9.8 \times \mu \times W \times r$$

- T:** torque (N·m)
- μ :** coefficient of friction
- W:** mass (kg)
- r:** radius of friction face (m)

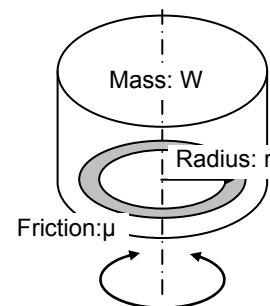


● Horizontal linear motion

The following formula calculates the torque for horizontal linear motion of mass [W] fed by the screw of pitch [P].

$$T = 9.8 \times \mu \times W \times \frac{P}{2 \times \pi}$$


- T:** torque (N·m)
- μ:** coefficient of friction
- W:** mass (kg)
- P:** screw pitch (m)

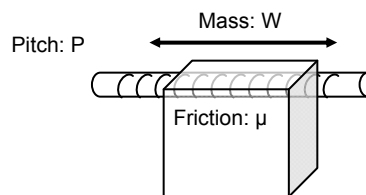

● Vertical linear motion

The following formula calculates the torque for vertical linear motion of mass [W] fed by the screw of pitch [P].

$$T = 9.8 \times W \times \frac{P}{2 \times \pi}$$

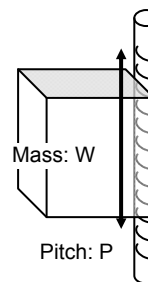


Acceleration time and deceleration time

The fastest acceleration and deceleration times with the selected actuator can be calculated using the following formula.

Acceleration: $t_a = (J_A + J_L) \times \frac{2 \times \pi}{60} \times \frac{N}{T_M - T_L}$ (1)

Deceleration: $t_d = (J_A + J_L) \times \frac{2 \times \pi}{60} \times \frac{N}{T_M + 2 \times T_F - T_L}$ (2)

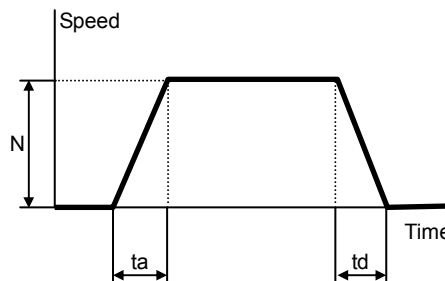

- ta:** acceleration time (sec)
- td:** deceleration time (sec)
- JA:** actuator inertia (kg·m²)
- JL:** load moment of inertia (kg·m²)
- N:** actuator speed (r/min)
- TM:** maximum torque of actuator (N·m)
- TL:** load torque (N·m)

For polarity, the rotation direction is set to positive (+), and the opposite direction is set to negative (-).

The friction torque of the actuator T_F (N·m) can also be obtained from the following formula:

$$T_F = K_T \times I_M - T_M$$
 (3)

- KT** : Torque constant [N·m/A]
- IM** : Maximum current [A]

Example: 1

Select an actuator that best suits the following operating conditions:

Rotary speed: 140r/min

Load moment of inertia: $0.9 \times 10^{-3} \text{ kg} \cdot \text{m}^2$

Since the load mechanism is mainly inertia, the load torque is negligibly small.

Acceleration/deceleration time is 0.03sec (30msec) or less.

(1) Compare these conditions with the [1-5 Specifications of RSF supermini actuators] (P1-3) and temporarily select RSF-5B-50.

(2) Obtain $J_A = 1.83 \times 10^{-4} \text{ kg} \cdot \text{m}^2$, $T_M = 0.9 \text{ N} \cdot \text{m}$, $K_T = 0.54 \text{ N} \cdot \text{m/A}$, and $I_M = 2.2 \text{ A}$ from [1-5 Specifications of RSF supermini actuators] (P1-3).

(3) The friction torque of the actuator is $T_F = 0.54 \times 2.2 - 0.9 = 0.29 \text{ N} \cdot \text{m}$ from Formula (3) on the previous page.

(4) Therefore, the shortest acceleration time and deceleration time can be obtained from Formula (1) and Formula (2), as follows:

$$t_a = (0.183 \times 10^{-3} + 0.9 \times 10^{-3}) \times 2 \times \pi / 60 \times 140 / 0.9 = 0.018 \text{ sec (18msec)}$$

$$t_d = (0.183 \times 10^{-3} + 0.9 \times 10^{-3}) \times 2 \times \pi / 60 \times 140 / (0.9 + 2 \times 0.29) = 0.011 \text{ s (11msec)}$$

(5) Because the assumed acceleration/deceleration time is 0.03sec (30msec) or less, the temporarily selected actuator can be used for acceleration/deceleration, based on the result of (4).

(6) If the calculation results of the acceleration/deceleration time do not fall within the desired time range, examine them again as follows.

- Try to reduce the load moment of inertia.
- Re-examine the gear ratio and gear head model.

Examining duty

During the selecting process of the RSF supermini series, the temporal variability of torque and rotation speed need to be taken into account. During acceleration or deceleration in particular, a large amount of electricity flows to generate a large amount of torque, resulting in a greater amount of heat.

Using the following formula, calculate the duty: %ED when the actuator is operated repeatedly in the drive pattern shown to the right.

$$\%ED = \frac{K_{La} \times t_a + K_{Lr} \times t_r + K_{Ld} \times t_d}{t} \times 100 \quad (4)$$

t_a: Acceleration time from speed 0 to N [s]

t_d: Deceleration time from speed N to 0 [s]


t_r: Operating time at a constant speed of N [s]

t: single cycle time in second [s]

K_{La}: duty factor for acceleration time

K_{Lr}: duty factor for driving time

K_{Ld}: duty factor for deceleration time

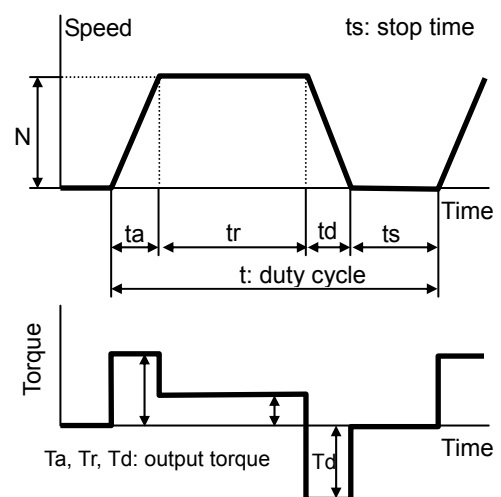

How to obtain K_{La} , K_{Lr} and K_{Ld} and example of duty calculation 2

As a result of Calculation Example 1 shown below, the selected actuator RSF-5B-50 works fine, so RSF-5B-50 can be used for duty factor graphs.

Operation conditions:

- The inertial load is accelerated at the maximum torque of the actuator, and decelerated at the maximum torque after operation at a fixed speed.
- The movement angle θ of one cycle is 120° .
- The duration of one cycle is 0.4 (s).
- The other conditions are the same as Calculation Example 1.

- (1) K_{La} and K_{Ld} : The average speed during the rotation speed change from 0 to 140r/min is 70r/min. From the duty factor graphs, $K_{La}=K_{Ld}\approx 1.5$ can be obtained.
- (2) K_{Lr} : $Tr\approx 0$ for the inertial load. Similarly, from the duty factor graphs, $K_{Lr}\approx 0.29$ can be read.
- (3) The movement angle can be obtained from the area in the "Rotation speed-Time" diagram above. In other words, the movement angle θ can be expressed as follows:

$$\theta = (N / 60) \times \{tr + (ta + td) / 2\} \times 360$$

Solving the formula above for tr (operation time at a fixed speed of N), the following can be obtained.

$$tr = \theta / (6 \times N) - (ta + td) / 2$$

Substituting $\theta = 120^\circ$ and $ta = 0.03(s)$, $td = 0.03(s)$, and $N = 140r/min$ from Example 1, $tr = 0.113(s)$.


- (4) Because the cycle time is 0.4(s), the %ED is obtained as follows:

$$\%ED = (1.5 \times 0.03 + 0.29 \times 0.113 + 1.5 \times 0.03) / 0.4 \times 100 = 30.7\%$$

Because the value of %ED obtained is below 100, continuous repeated operation of this cycle can be done.


If this value is 100 or above,

- Operation pattern
 - Load reduction
- must be reexamined.

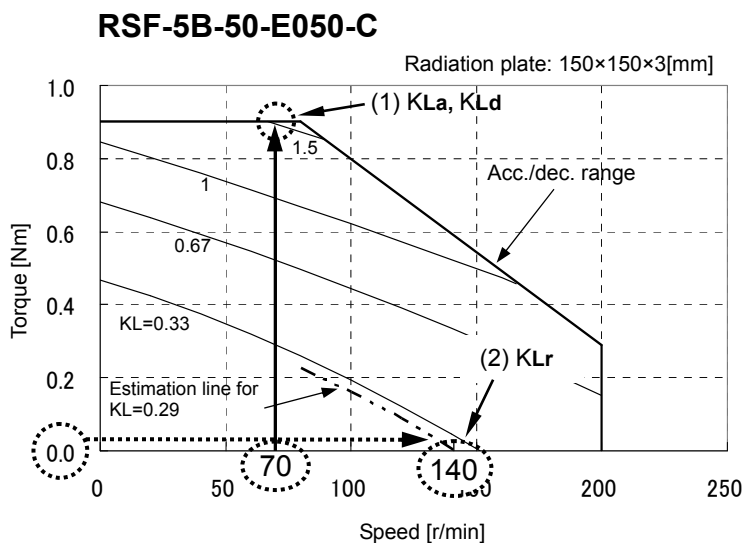


Graphs of duty factor


● RSF-3C-30-E020-C

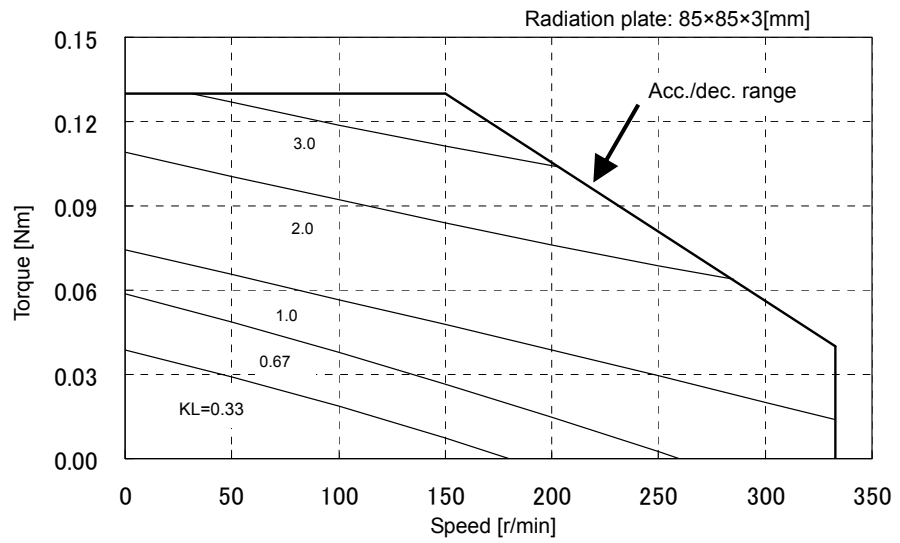

● RSF-3C-50-E020-C

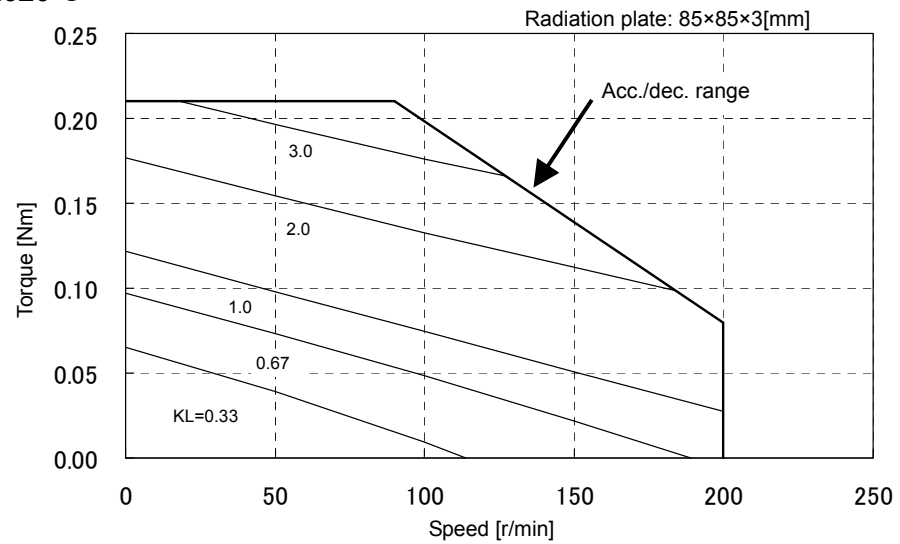


● RSF-3C-100-E020-C

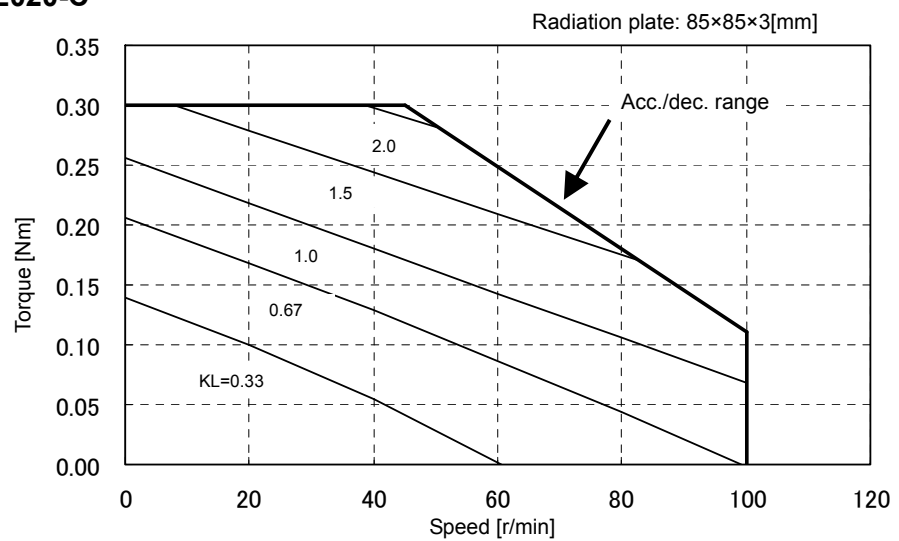


2

Selection of the RSF supermini Series


● RSF-5B-30-E050-C

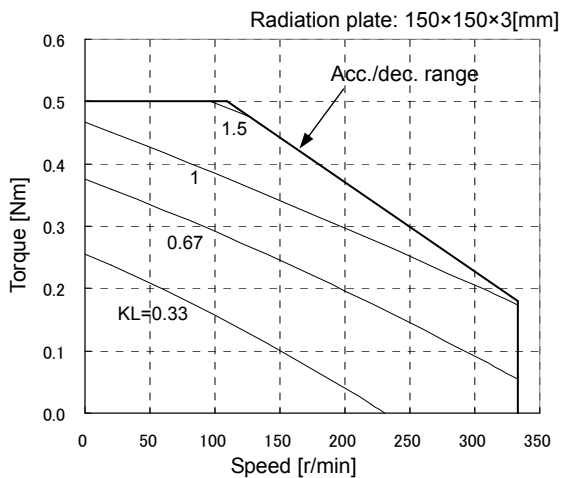


● RSF-5B-30-E050-BC

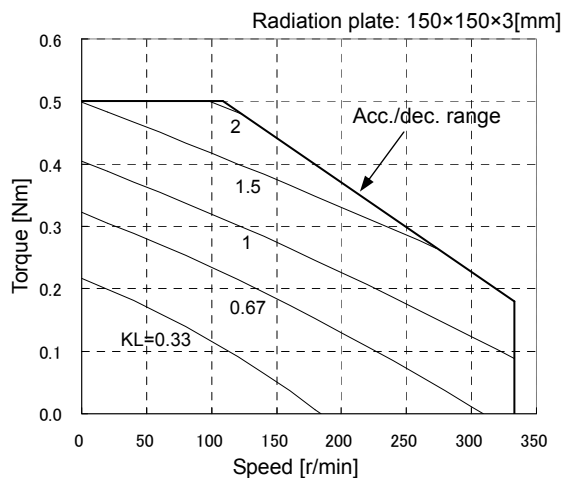


● RSF-5B-50-E050-C

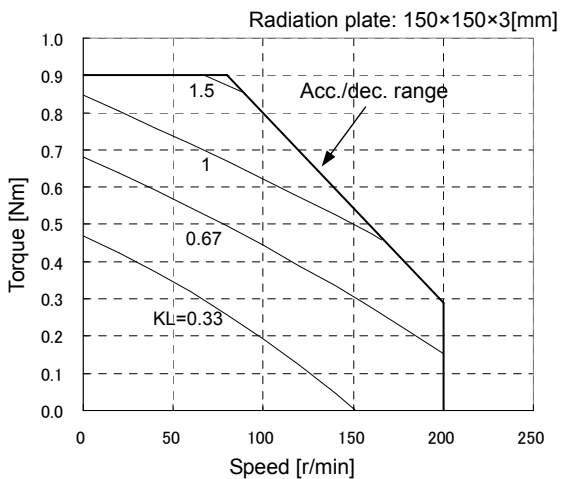


● RSF-5B-50-E050-BC

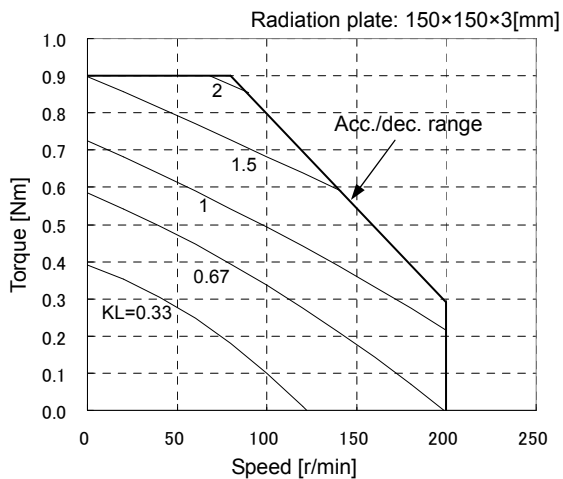

● RSF-5B-100-E050-C

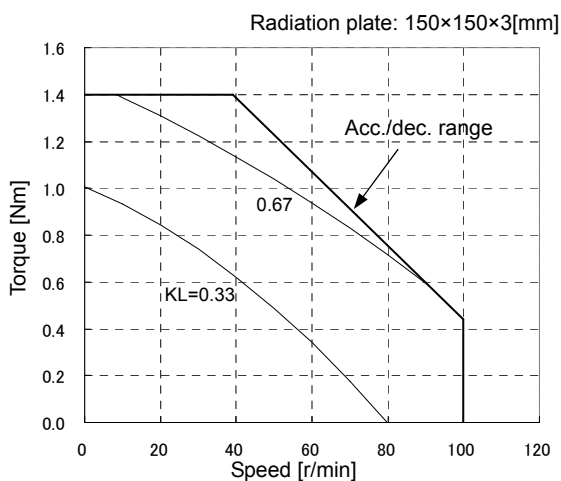

● RSF-5B-100-E050-BC

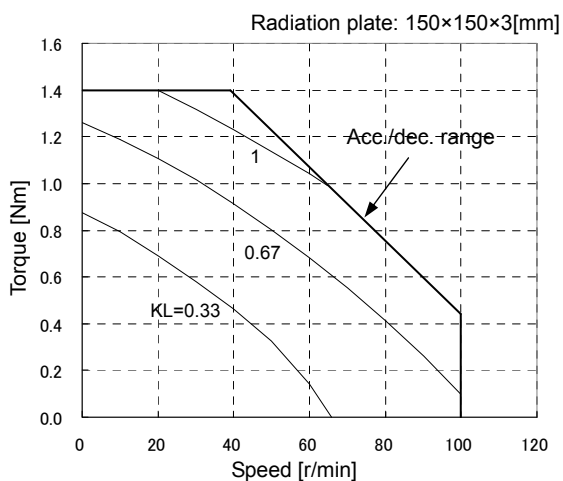

Examining effective torque and average rotational speed

Additionally to the former studies, the effective torque and the average speed should be studied.

- (1) The effective torque should be less than allowable continuous torque specified by the driver.
- (2) The average speed should be less than allowable continuous speed of the actuator.

Calculate the effective torque (T_m) and the average speed of an operating cycle (N_{av}) as shown in [Examining duty] (P2-4).

$$T_m = \sqrt{\frac{T_a^2 \times (t_a + t_d) + T_r^2 \times t_r}{t}}$$

$$N_{av} = \frac{\frac{N}{2} \times t_a + N \times t_r + \frac{N}{2} \times t_d}{t}$$

T_m:	effective torque	(N·m)		
T_a:	maximum torque	(N·m)		
T_r:	load torque	(N·m)		
t_a:	acceleration time	(s)	t_d:	deceleration time (s)
t_r:	running time at constant speed	(s)	t:	time for one duty cycle
N_{av}:	average speed	(r/min)		
N:	driving speed	(r/min)		

If the calculation results for the effective torque and average rotation speed are not within the range of continuous usage in the graph shown in [1-15 Operable range] (P1-13) take measures to reduce the duty.

Example 3: getting effective torque and average speed

Effective torque and average speed are studied by using the operation conditions of Example 1 and 2.

1) Effective torque

From the parameters of $T_a = 8.3 \text{ N}\cdot\text{m}$, $T_r = 0 \text{ N}\cdot\text{m}$, $t_a = 0.113 \text{ s}$, $t_r = t_d = 0.03 \text{ s}$, $t = 0.4 \text{ s}$,

$$T_m = \sqrt{\frac{0.9^2 \times (0.03 + 0.03)}{0.4}} = 0.349 \text{ N}\cdot\text{m}$$

The value exceeds the allowable continuous torque ($0.29 \text{ N}\cdot\text{m}$) of RSF-5B-50 temporarily selected in Example 1, so continuous operation cannot be done using the cycle set in Example 2. The following formula is the formula for effective torque solved for t . By substituting the value of allowable continuous torque in T_m of this formula, the allowable value for one cycle time can be obtained.

$$t = \frac{T_a^2 \times (t_a + t_d) + T_r^2 \times t_r}{T_m^2}$$

Substituting $0.9 \text{ N}\cdot\text{m}$ for T_a , $0 \text{ N}\cdot\text{m}$ for T_r , $0.349 \text{ N}\cdot\text{m}$ for T_m , 0.03 s for t_a , 0.113 s for t_r , and 0.03 s for t_d :

$$t = \frac{0.9^2 \times (0.03 + 0.03)}{0.29^2} = 0.578 \text{ [s]}$$

Namely, when the time for one duty cycle is set more than 0.578 s , the effective torque [T_m] becomes less than $0.29 \text{ N}\cdot\text{m}$, and the actuator can drive the load with lower torque than the continuous torque continuously.

2) Average speed

From the parameters of $N = 140 \text{ r/min}$, $t_a = 0.03 \text{ s}$, $t_r = 0.113 \text{ s}$, $t_d = 0.03 \text{ s}$, $t = 0.4 \text{ s}$


$$N_{av} = \frac{140/2 \times 0.03 + 140 \times 0.113 + 140/2 \times 0.03}{0.578} = 34.64 \text{ [r/min]}$$

As the speed is less than the continuous speed (90 r/min) of RSF-5B-50, it is possible to drive it continuously on new duty cycle.


Permissible overloaded time

In case RSF supermini series is intermittently operated in allowable continuous torque or more, the overloaded time is limited by the protective function in the driver even if the duty cycle is allowed. The limits are shown in the figure below.

RSF-3C

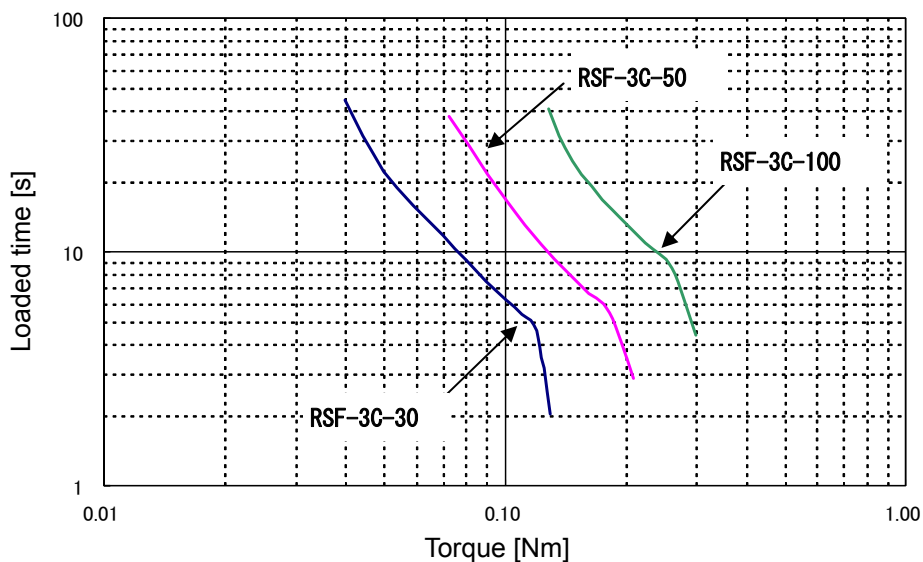

RSF-5B

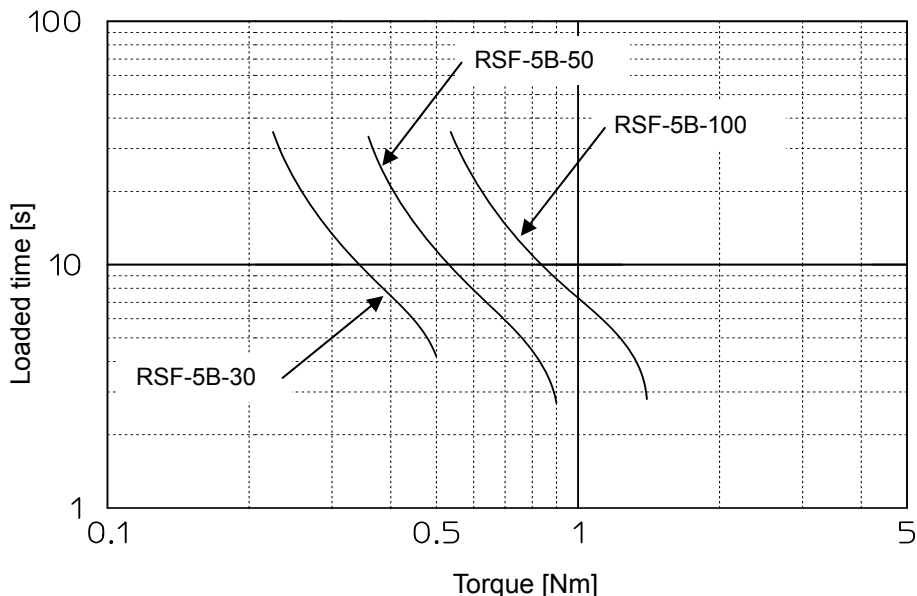

Chapter 3

Installing the actuator

The following explains the installation procedures of the actuators.

3-1	Receiving inspection	3-1
3-2	Notice on handling	3-2
3-3	Location and installation	3-3

3-1 Receiving inspection

Check the following when products are received.

- Inspection procedure

- (1) Check the shipping container and item for any damage that may have been caused during transportation. If the item is damaged, immediately report the damage to the dealer it was purchased from.
- (2) A label is attached on the side of the RSF supermini series actuator. Confirm the products you ordered by comparing with the model on the [TYPE] line of the label. If it is different, immediately contact the dealer it was purchased from.
For details of model symbols, refer to [1-3 Ordering information] (P1-2).
- (3) On the label of the HA-680 driver, the model code of the actuator to be driven is indicated on the [ADJUSTED FOR USE WITH] line. Match the actuator with its driver so as not to confuse the item with the other actuators.



Only connect the actuator specified on the driver label.

The drivers have been tuned for the actuator specified on the driver label. Wrong combination of drivers and actuators may cause low torque problems or over current that may cause physical injury and fire.

- (4) The HA-680 driver is for 24VDC supply voltage only. Any power supply voltage other than 24VDC cannot be used.



Do not connect a supply voltage other than the voltage specified on the label.

The wrong power supply voltage (other than 24VDC) may damage the driver resulting physical injury and fire.

3-2 Notice on handling

Handle the RSF supermini series actuator carefully by observing the notices specified below.



Do not plug the actuators directly into a commercial line power source. This could burn out the actuator, potentially resulting in a fire and/or electrical hazard.



- (1) Do not apply impact or unnecessary excessive force to output flange of actuators.
- (2) Do not put actuators on in a location where the driver could easily fall.
- (3) The allowable temperature for storage is from -20°C to $+60^{\circ}\text{C}$. Do not expose it to the sunlight for a long time and do not store it in areas with widely fluctuating temperatures.
- (4) The allowable relative humidity for storage is less than 80%. Do not store it in highly humid place or in a place where temperature changes excessively during the course of a day.
- (5) Do not use or store the actuator in locations subject to corrosive gases or dust particles.

3-3 Location and installation

Environment of location

The environmental conditions of the installation location for RSF supermini series actuators must be as follows. Determine an appropriate installation location by observing these conditions without fail.

- Service temperature:0°C to 40°C
The temperature in the cabinet may be higher than the atmosphere depending on the power loss of housed devices and size of the cabinet. Design the closed space size, ventilation system, and device locations so the ambient temperature near the actuator is always less than 40°C.
- Service humidity:20 to 80% relative humidity, without condensation
Make sure no water condensation occurs at the place where there is a large temperature change in a day or due to frequent heat-and-cool cycles due to the operation of the actuator.
- Vibration:less than 49m/sec^2 (10Hz~400Hz)
- Impact:less than 300 m/sec^2
- Make sure the actuator is in an area free from dust, water condensation, metal powder, corrosive gas, water, water drops, and oil mist.
- Locate the driver indoors. Do not expose it to the sunlight.

Considerations into External Noise

Pay sufficient attention when installing the actuator: The actuator may malfunction by external noise depending on the conditions of installation.

- Make sure that the FG line of RSF-5B is securely grounded.
- Because RSF-3C does not have any FG line from the motor enclosure. Thus, when using it, make sure that that enclosure is securely grounded to the body of the equipment through the gear head house. In addition, make sure that the body of the equipment is securely grounded.
- Do not bind the motor line and encoder signal line together.
- Do not draw any external power line (i.e., driver power supply line, 100/200 VAC line.), actuator signal line, and motor line through the same pipe or duct or bind them together.

The noise tolerance values of RSF supermini equipment are listed below.

They are guide values from a measurement that were performed using a standard relay cable in a noise test environment while the clamp filter included with the product was installed to the equipment. Note that the noise tolerance values in your actual environment of use may differ from them.

Model	RSF-3C	RSF-5B
Noise tolerance (encoder signal line)	1.5kV	2.0kV

Installation

Since the RSF supermini series actuator is a high precision servo mechanism, great care is required for proper installation.

Install the actuator taking care not to damage accurately machined surfaces. Do not hit the actuator with a hammer. Take note that actuators provide a glass encoder, which may be damaged by impact.

- Procedure

(1) Align the axis of rotation of the actuator and the load mechanism precisely.

Note 1: Very careful alignment is required especially when a rigid coupling is applied. Slight differences between centerlines will cause failure of the output shaft of the actuator.

Note 2: When attaching a coupling, be sure not to apply force to the actuator output shaft.

(2) Fasten the flange of the actuator with flat washers and high strength bolts. Use a torque wrench when tightening the fasteners.

The recommended tightening torque is shown in the table below:

Model		RSF-3C	RSF-5B
Number of bolts		4	2
Bolt size		M1.6	M2
Installation PCD	mm	15	25
Wrenching torque	N·m	0.26	0.25
	kgf·m	0.03	0.03
Transfer torque	N·m	3.0	2.0
	kgf·m	0.3	0.2

Recommended bolt: JIS B 1176 bolt with hexagonal hole; Strength category: JIS B 1051 12.9 or greater

(3) For wiring operation, refer to “AC Servo Driver for 24VDC Power Supply HA-680 Series Technical Data.”

(4) Motor cable and encoder cable

Do not pull the cable. Do not hang the actuator with the cable. If you do, the connection part may be damaged. Install the cable with slack not to apply tension to the actuator. Especially, do not use the actuator under any condition where the cable is bent repeatedly.



Do not disassemble and re-assemble the actuator.

The actuator uses many precision parts. The Harmonic Drive Systems, Inc. does not guarantee the actuator that has been reassembled by others than the authorized persons by the Harmonic Drive Systems, Inc.

3

Installing the actuator

Chapter 4

Motor shaft retention brake(RSF-5B)

RSF-5B actuator is standard-equipped with a motor shaft holding brake. (Option symbol: B) An external brake is not required to meet the fail safe and other requirements. The brake has 2 coils; one for releasing brake, and another for retaining the released state. By controlling the currents through the coils, power consumption during retention of brake release can be reduced.

4-1	Motor shaft retention brake specifications.....	4-1
4-2	Controlling the brake power supply.....	4-2

4-1 Motor shaft retention brake specifications

Item	Gear ratio	30	50	100
Method		Single disc dry type deenergisation operation type (Separate attraction coil and retention coil)		
Brake operating voltage	V	24VDC±10%		
Current consumption during release (at 20°C)	A	0.8		
Current consumption during retention of release (at 20°C)	A	0.05		
Retention torque Note 1	N·m	0.18	0.29	0.44
	kgf·cm	1.84	2.96	4.49
Moment of inertia Note 1	$(GD^2/4)$ kg·cm ²	0.111×10^{-3}	0.309×10^{-3}	1.234×10^{-3}
	(J) kgf·cm·s ²	1.132×10^{-3}	3.151×10^{-3}	12.58×10^{-3}
Weight Note 2	g	86 (excluding the clamp filters)		
Number of allowable brake operations Note 3		100,000 times		

Note 1: This is a value at the output shaft of the actuator.

Note 2: This is a value for the entire actuator.

Note 3: The motor shaft rotation speed is controlled as shown in the following table.

Gear ratio	Output shaft rotation speed [r/min]	Motor shaft rotation speed [r/min]
1:30	5.0	150
1:50	3.0	
1:100	1.5	

4-2 Controlling the brake power supply

Using a relay cable (Recommended method)

The optional relay cables for brakes (EWA-B××-JST03-TMC) incorporate a circuit that controls the brake current.

You don't have to control the brake current, so it is recommended to use the actuator with a brake in combination with a relay cable for brakes.

If the relay cable for brakes is used, brake can be operated by turning on/off the brake power supply.

The power supply for the brake (that can output $24\text{VDC}\pm 10\%$) shall be provided by the customer. Use a power supply unit that can output the current during release as described in [4-1 Motor shaft retention brake specifications] (P4-1).

The supply duration of the current consumption during release is 0.5sec or less at $24\text{VDC}\pm 10\%$.


Not using a relay cable

If the optional relay cable for brakes (EWA-B××-JST03-TMC) is not used, the customer must control the brake power supply to the brake release coil and release retention coil.

Supply the power upon brake release and during brake release retention, as shown below.

	Lead wire color	Applied voltage
Upon brake release	Gray/Yellow	$24\text{VDC}\pm 10\%$
	Blue/Yellow	
During release retention	Gray/Yellow	0VDC
	Blue/Yellow	$24\text{VDC}\pm 10\%$
During brake use	Gray/Yellow	0VDC
	Blue/Yellow	

Supply the power to the coils according to the following time chart.

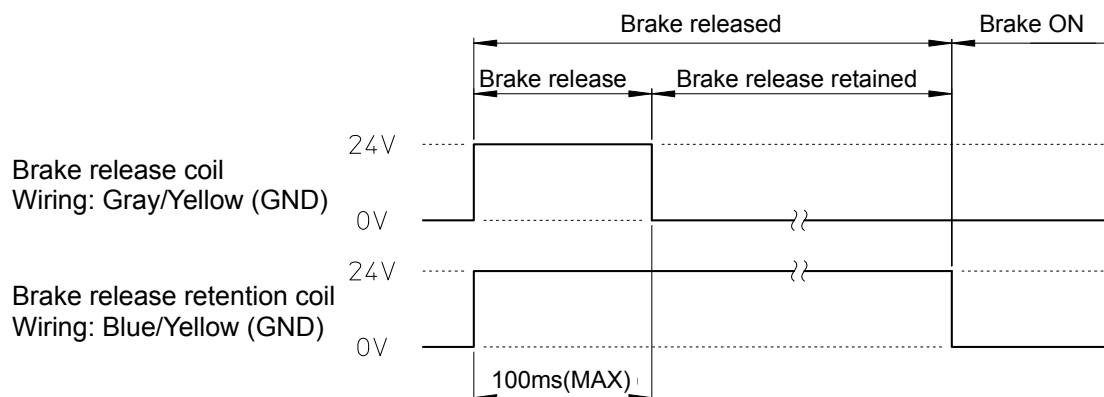

Control the power supply so that the duration in which the power is supplied to the brake release coil (gray/yellow) is 100ms or less. The brake will not be released only by the power supply to the brake release retention coil. To release the brake, also supply the power to the brake release coil.



The power supply to the brake must be controlled.

Control the power supply to the brake as described in [4-2 Controlling the brake power supply] (P4-2). If the current flows continuously to the attraction coil, the actuator burns due to temperature rise, causing fire or electric shock.



Be careful not to exceed the number of allowable brake operations (Refer to [4-1 Motor shaft retention brake specifications] (P4-1)).

If the number is exceeded, the retention torque drops and it cannot be used as a brake.

Chapter 5

Options

Options you can purchase as necessary are explained in this chapter.

5-1	Relay cables	5-1
5-2	Relay cable wire bound specifications	5-2
5-3	Connectors	5-3

5-1 Relay cables


There are relay cables that connect the RSF supermini series actuator and driver. There are 3 types of relay cables for encoders, motors, and brakes. Select an appropriate type according to the model of the actuator you ordered.

- **Relay cable model** (XX indicates the cable length 3m, 5m, or 10m.)

(1) For encoders

EWA-Exx-JST09-3M14


Cable length (03=3m, 05=5m, 10=10m) : L

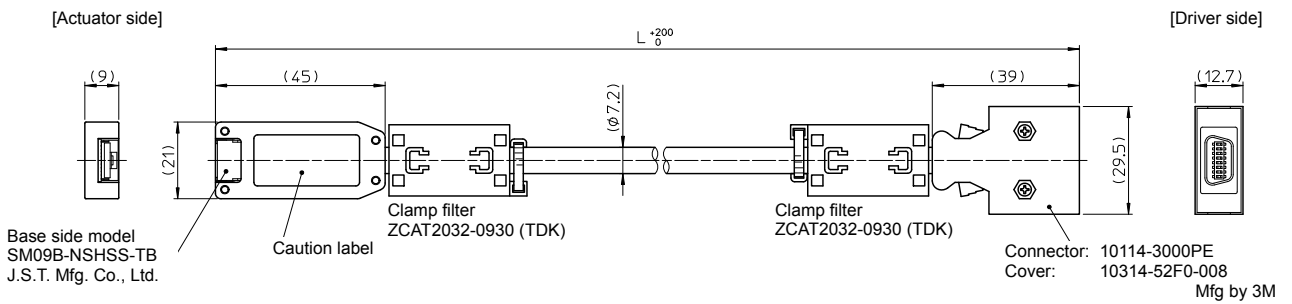

(2) For motors

EWA-Mxx-JST04-TN2


Cable length (03=3m, 05=5m, 10=10m) : L

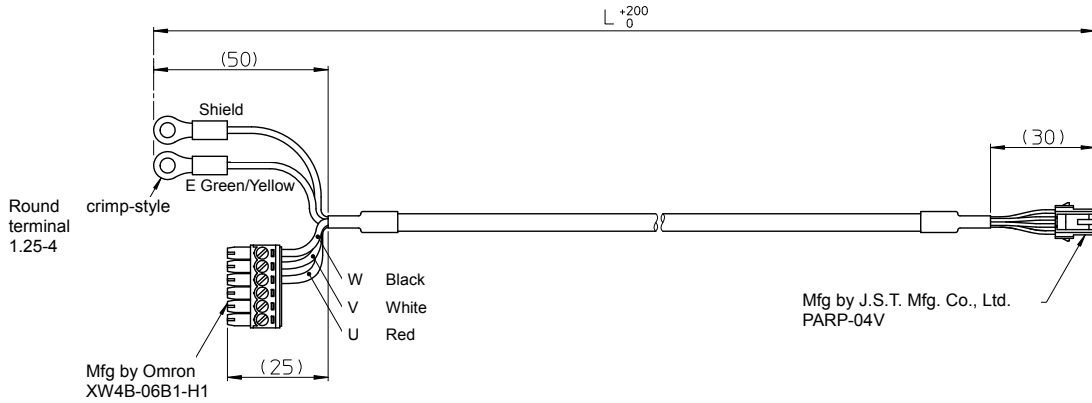

(3) For brakes (RSF-5B only)

EWA-Bxx-JST03-TMC

Cable length (03=3m, 05=5m, 10=10m)

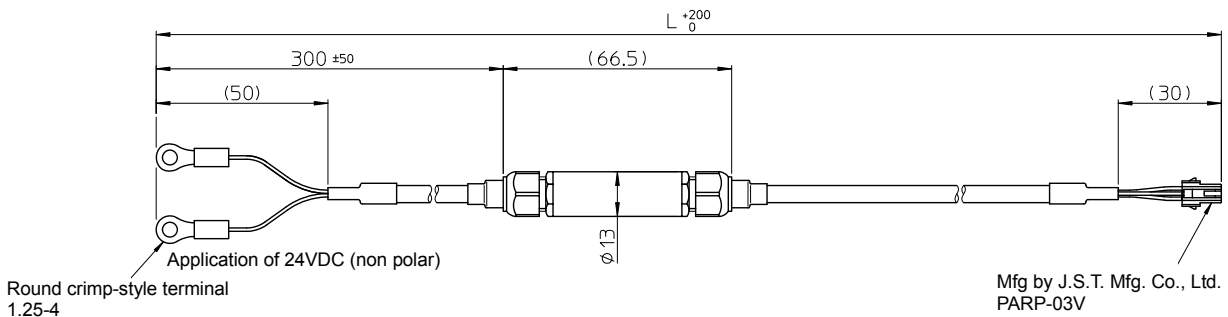

5-2 Relay cable wire bound specifications

The following tables show the wire bound specifications of the relay cables.

(1) For encoders (EWA-E××-JST09-3M14)

Actuator side

Pin NO.	Signal name	Pin NO.	Signal name
1	A phase	6	W phase
2	B phase	7	+5V
3	Z phase	8	GND
4	U phase	9	N.C.
5	V phase		

Connector: SM09B-NSHSS-TB
J.S.T. Mfg. Co., Ltd.

Driver side

Pin NO.	Signal name	Pin NO.	Signal name
1	+5V	8	GND
2	B+ phase	9	U+ phase
3	Z+ phase	10	U- phase
4	B- phase	11	V+ phase
5	A+ phase	12	V- phase
6	Z- phase	13	W+ phase
7	A- phase	14	W- phase

Connector: 10114-3000PE
Cover: 10314-52F0-008
3M

(2) For motors (EWA-M××-JST04-TN2)

Actuator side

Pin NO.	Signal name
1	U phase
2	V phase
3	W phase
4	FG

Connector

Housing: PARP-04V
Retainer: PMS-04V-S
Contact: S(B)PA-001T-P0.5

J.S.T. Mfg Co.,Ltd

Driver side

Signal name	Connector
U phase	XW4B-06B1-H1 Omron
V phase	
W phase	
FG	Round crimp-style terminal 1.25-4 With insulating coating
Shield	

(3) For brakes (EWA-B××-JST03-TMC)

Actuator side

Pin NO.	Wire color
1	Red
2	White
3	Black

Connector

Retainer: PMS-03V-S
Housing: PARP-03V
Contact: S(B)PA-001T-P0.5

J.S.T. Mfg Co.,Ltd


Power supply side for brake

Wire color	Connector
Red, black (nonpolar)	Round crimp-style terminal 1.25-4 With insulating coating

5-3 Connectors

There are 2 types of connectors for the driver for different set types:

- Connector model: CNK-HA68-S1
For CN1, CN2, actuator line connection, power supply connection.....4 types
- Connector model: CNK-HA68-S2
For CN2, power supply connection.....2 types

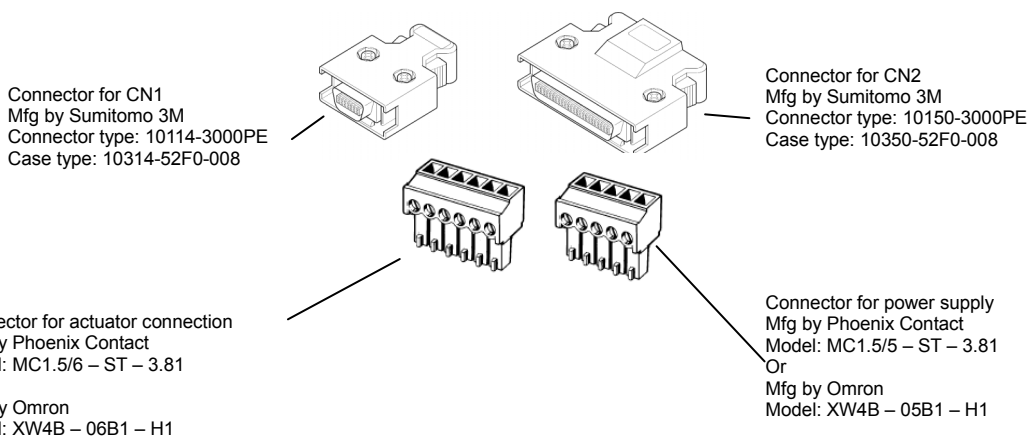

Appendix

This chapter explains the conversion of unit and the moment of inertia.

A-1	Conversion of unit	A-1
A-2	Moment of inertia	A-3

A-1 Conversion of unit

This technical manual basically uses the SI unit system. The conversion coefficients between the SI unit system and other unit systems are shown below.

(1) Length

SI unit	m	
	↓	
Unit	ft.	in.
Coefficient	3.281	39.37

Unit	ft.	in.
Coefficient	0.3048	0.0254
	↓	
SI unit	m	

(2) Linear speed

SI unit	m/s			
	↓			
Unit	m/min	ft./min	ft./s	in/s
Coefficient	60	196.9	3.281	39.37

Unit	m/min	ft./min	ft./s	in/s
Coefficient	0.0167	5.08×10^{-3}	0.3048	0.0254
	↓			
SI unit	m/s			

(3) Linear acceleration

SI unit	m/s^2			
	↓			
Unit	m/min^2	$ft./min^2$	$ft./s^2$	in/s^2
Coefficient	3600	1.18×10^4	3.281	39.37

Unit	m/min^2	$ft./min^2$	$ft./s^2$	in/s^2
Coefficient	2.78×10^{-4}	8.47×10^{-5}	0.3048	0.0254
	↓			
SI unit	m/s^2			

(4) Force

SI unit	N		
	↓		
Unit	kgf	lb (force)	oz (force)
Coefficient	0.102	0.225	4.386

Unit	kgf	lb (force)	oz (force)
Coefficient	9.81	4.45	0.278
	↓		
SI unit	N		

(5) Mass

SI unit	kg	
	↓	
Unit	lb.	oz.
Coefficient	2.205	35.27

Unit	lb.	oz.
Coefficient	0.4535	0.02835
	↓	
SI unit	kg	

(6) Angle

SI unit	rad		
Unit	Deg.	Min.	Sec.
Coefficient	57.3	3.44×10^3	2.06×10^5

Unit	Deg.	Min.	Sec.
Coefficient	0.01755	2.93×10^{-4}	4.88×10^{-6}
SI unit	rad		

(7) Angular speed

SI unit	rad/s			
Unit	Deg./s	Deg./min	r/s	r/min
Coefficient	57.3	3.44×10^3	0.1592	9.55

Unit	Deg./s	Deg./min	r/s	r/min
Coefficient	0.01755	2.93×10^{-4}	6.28	0.1047
SI unit	rad/s			

(8) Angular acceleration

SI unit	rad/s ²	
Unit	Deg./s ²	Deg./min ²
Coefficient	57.3	3.44×10^3

Unit	Deg./s ²	Deg./min ²
Coefficient	0.01755	2.93×10^{-4}
SI unit	rad/s ²	

(9) Torque

SI unit	Nm			
Unit	kgfm	lbft	lbin	ozin
Coefficient	0.102	0.738	8.85	141.6

Unit	kgfm	lbft	lbin	ozin
Coefficient	9.81	1.356	0.1130	7.06×10^{-3}
SI unit	Nm			

(10) Moment of inertia

SI unit	kgm ²							
Unit	kgfms ²	kgfcms ²	lbft ²	lbfts ²	lbin ²	lbins ²	ozin ²	ozins ²
Coefficient	0.102	10.2	23.73	0.7376	3.42×10^3	8.85	5.47×10^4	141.6

Unit	kgfms ²	kgfcms ²	lbft ²	lbfts ²	lbin ²	lbins ²	ozin ²	ozins ²
Coefficient	9.81	0.0981	0.0421	1.356	2.93×10^{-4}	0.113	1.829×10^{-5}	7.06×10^{-3}
SI unit	kgm ²							

(11) Torsional spring constant, moment of rigidity

SI unit	Nm/rad				
Unit	kgfm/rad	kgfm/arc min	kgfm/Deg.	lbft/Deg.	lbin/Deg.
Coefficient	0.102	2.97×10^{-5}	1.78×10^{-3}	0.0129	0.1546

Unit	kgfm/rad	Kgfm/arc min	kgfm/Deg.	lbft/Deg.	lbin/Deg.
Coefficient	9.81	3.37×10^4	562	77.6	6.47
SI unit	Nm/rad				

A-2 Moment of inertia

1. Calculation formulas for mass and moment of inertia

(1) When center of revolution and line of center of gravity match





Calculation formulas for mass and moment of inertia are shown below.





m: Mass (kg), I_x, I_y, I_z : moment of inertia (kgm^2) making Axes x, y and z as centers of revolution

G : Distance from edge surface of center of gravity (m)

ρ : Density (kg/m^3)





Units - Length: m, mass: kg, moment of inertia: kgm^2

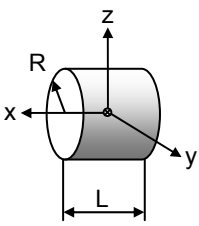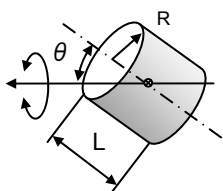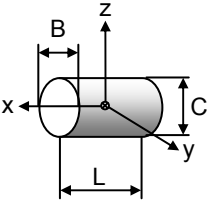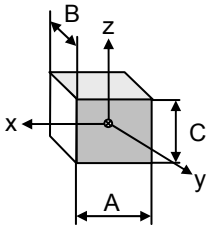Shape of object	Mass, inertia, position of center of gravity
Circular cylinder 	$m = \pi R^2 L \rho$ $I_x = \frac{1}{2} m R^2$ $I_y = \frac{1}{4} m \left(R^2 + \frac{L^2}{3} \right)$ $I_z = \frac{1}{4} m \left(R^2 + \frac{L^2}{3} \right)$
Tilted circular cylinder 	$m = \pi R^2 L \rho$ $I_\theta = \frac{1}{12} m \times \left\{ 3R^2(1 + \cos^2\theta) + L^2 \sin^2\theta \right\}$
Elliptic circular cylinder 	$m = \pi B C L \rho$ $I_x = \frac{1}{16} m (B^2 + C^2)$ $I_y = \frac{1}{4} m \left(\frac{C^2}{4} + \frac{L^2}{3} \right)$ $I_z = \frac{1}{4} m \left(\frac{B^2}{4} + \frac{L^2}{3} \right)$
Prism 	$m = A B C \rho$ $I_x = \frac{1}{12} m (B^2 + C^2)$ $I_y = \frac{1}{12} m (C^2 + A^2)$ $I_z = \frac{1}{12} m (A^2 + B^2)$

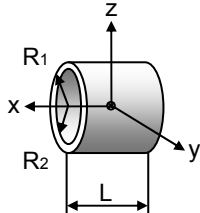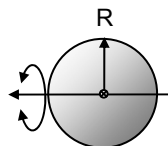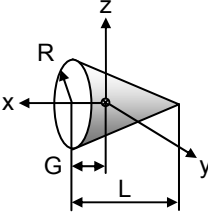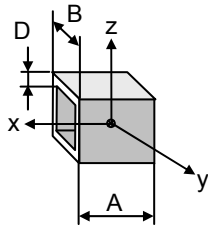Shape of object	Mass, inertia, position of center of gravity
Round pipe  R1: Outside diameter R2: Inside diameter	$m = \pi (R_1^2 - R_2^2) L \rho$ $I_x = \frac{1}{2} m (R_1^2 + R_2^2)$ $I_y = \frac{1}{4} m \left\{ (R_1^2 + R_2^2) + \frac{L^2}{3} \right\}$ $I_z = \frac{1}{4} m \left\{ (R_1^2 + R_2^2) + \frac{L^2}{3} \right\}$
Sphere 	$m = \frac{4}{3} \pi R^3 \rho$ $I = \frac{2}{5} m R^2$
Cone  G	$m = \frac{\pi}{3} \pi R^2 L \rho$ $I_x = \frac{3}{10} m R^2$ $I_y = \frac{3}{80} m (4R^2 + L^2)$ $I_z = \frac{3}{80} m (4R^2 + L^2)$ $G = \frac{L}{4}$
Regular square pipe 	$m = 4AD(B - D)\rho$ $I_x = \frac{1}{3} m (B \cdot D)^2 + D^2$ $I_y = \frac{1}{6} m \left\{ \frac{A^2}{2} + (B \cdot D)^2 + D^2 \right\}$ $I_z = \frac{1}{6} m \left\{ \frac{A^2}{2} + (B \cdot D)^2 + D^2 \right\}$

App

Appendix

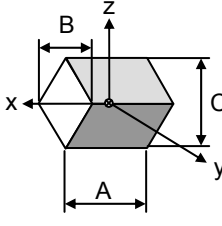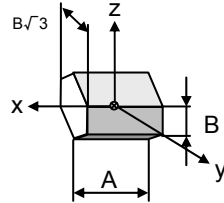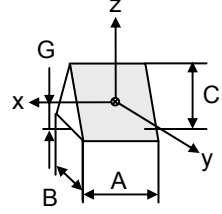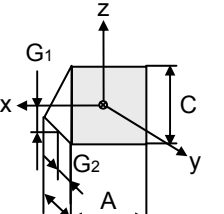Shape of object	Mass, inertia, position of center of gravity	Shape of object	Mass, inertia, position of center of gravity
Rhombic prism 	$m = \frac{1}{2} ABC\rho$ $I_x = \frac{1}{24} m(B^2 + C^2)$ $I_y = \frac{1}{24} m(C^2 + 2A^2)$ $I_z = \frac{1}{24} m(B^2 + 2A^2)$	Regular hexagon prism 	$m = \frac{3\sqrt{3}}{2} AB^2\rho$ $I_x = \frac{5}{12} mB^2$ $I_y = \frac{1}{12} m\left(A^2 + \frac{5}{2}B^2\right)$ $I_z = \frac{1}{12} m\left(A^2 + \frac{5}{2}B^2\right)$
Equilateral triangular prism 	$m = \frac{1}{2} ABC\rho$ $I_x = \frac{1}{12} m\left(\frac{B^2}{2} + \frac{2}{3}C^2\right)$ $I_y = \frac{1}{12} m\left(A^2 + \frac{2}{3}C^2\right)$ $I_z = \frac{1}{12} m\left(A^2 + \frac{B^2}{2}\right)$ $G = \frac{C}{3}$	Right-angled triangular prism 	$m = \frac{1}{2} ABC\rho$ $I_x = \frac{1}{36} m(B^2 + C^2)$ $I_y = \frac{1}{12} m\left(A^2 + \frac{2}{3}C^2\right)$ $I_z = \frac{1}{12} m\left(A^2 + \frac{2}{3}B^2\right)$ $G_1 = \frac{C}{3} \quad G_2 = \frac{B}{3}$

● Example of density

The following table shows informative values of density. Please check actual specific gravities of materials individually.

Material	Density	Material	Density	Material	Density
SUS304	7930	Aluminum	2700	Epoxy resin	1900
S45C	7860	Duralumin	2800	ABS	1100
SS400	7850	Silicon	2300	Silicon resin	1800
Cast iron	7190	Quartz glass	2200	Polyurethane rubber	1250
Copper	8920	Teflon	2200		
Brass	8500	Fluorocarbon resin	2200		


(2) When center of revolution and line of center of gravity do not match

Moment of inertia when axis of center of gravity and axis of revolution of an inertia field do not match is calculated by the following formula.

$$I = I_g + mF^2$$

I: Moment of inertia when axis of center of gravity and axis of revolution do not match (kgm²)

I_g: Moment of inertia when axis of center of gravity and axis of revolution match (kgm²)

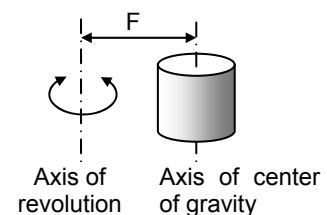

Calculated by formula shown in (1) in accordance with shape.

m: Mass (kg)

F: Distance between axis of revolution and axis of center of gravity (m)

(3) Moment of inertia of linear motion object

The moment of inertia converted into an FHA-C actuator axis of a linear motion object driven by a screw is calculated by the following formula.

$$I = m\left(\frac{P}{2\pi}\right)^2$$


I: Moment of inertia converted into actuator axis of a linear motion object (kgm²)

m: Mass (kg)

P: Amount of linear movement per revolution of actuator (m/rev)



2. Moment of inertia of circular cylinder

Approximate values of moment of inertia of circular cylinder can be calculated from the graph on the right.

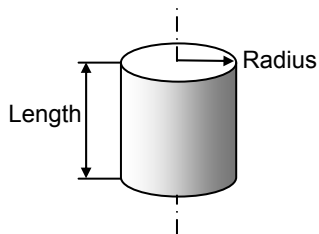

The top graph is applied to aluminum (density 2700) and the bottom graph, to steel (density 7850).

(Example)
 Material: Aluminum
 Outside diameter: 100mm
 Length: 7mm
 Shape: Circular cylinder
 Outside diameter: 100mm
 Since the outside diameter is 100mm, the radius is 50mm.
 Based on the top graph, moment of inertia is about $1.9 \times 10^{-4} \text{ kgm}^2$.
 (Calculated value: 0.000186 kgm^2)

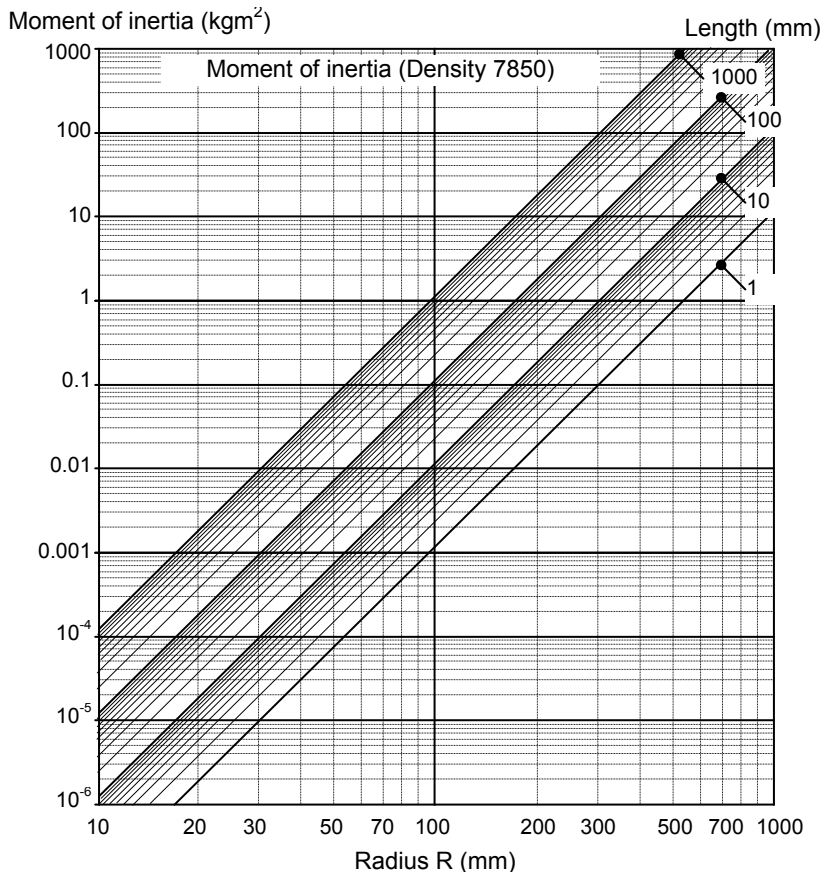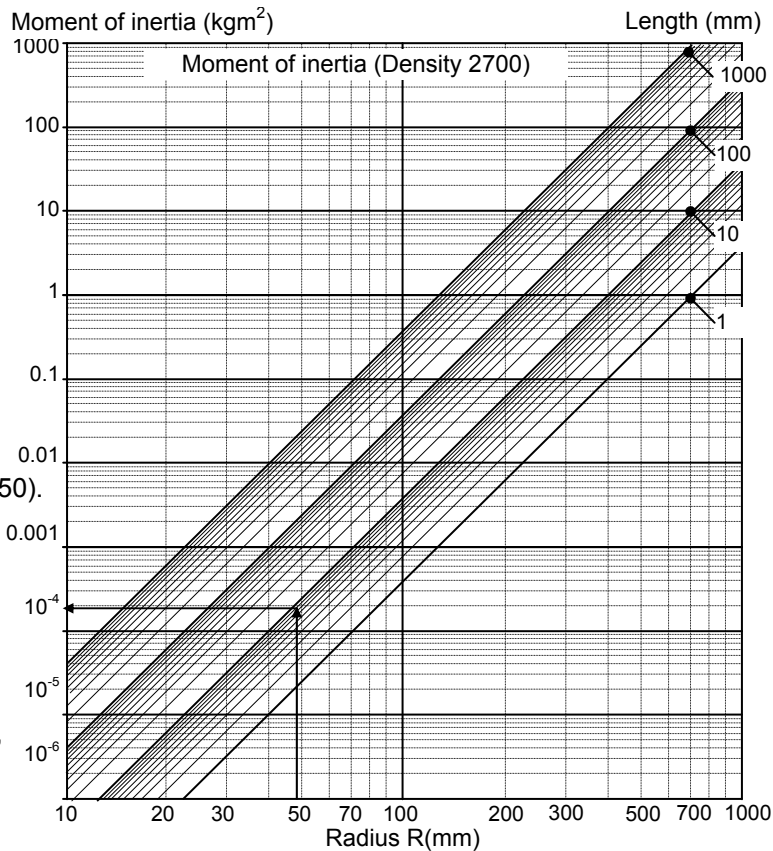

Warranty Period and Terms

The RSF supermini series actuators are warranted as follows:

■ Warranty period

Under the condition that the actuator are handled, used and maintained properly followed each item of the documents and the manuals, all the RSF supermini series actuators are warranted against defects in workmanship and materials for the shorter period of either one year after delivery or 2,000 hours of operation time.

■ Warranty terms

All the RSF supermini series actuators are warranted against defects in workmanship and materials for the warranted period. This limited warranty does not apply to any product that has been subject to:

- (1) user's misapplication, improper installation, inadequate maintenance, or misuse.
- (2) disassembling, modification or repair by others than Harmonic Drive Systems, Inc.
- (3) imperfection caused by the other than the RSF supermini series actuator and the HA-680 servo driver.
- (4) disaster or others that does not belong to the responsibility of Harmonic Drive Systems, Inc.

Our liability shall be limited exclusively to repairing or replacing the product only found by Harmonic Drive Systems, Inc. to be defective. Harmonic Drive Systems, Inc. shall not be liable for consequential damages of other equipment caused by the defective products, and shall not be liable for the incidental and consequential expenses and the labor costs for detaching and installing to the driven equipment.

RSF-B mini Series

AC Servo Actuator Manual

(RSF-8B, 11B, 14B 24VDC specification)

- Thank you very much for your purchasing our RSF-B mini series servo actuator.
- Be sure to use sufficient safety measures when installing and operating the equipment so as to prevent an accident resulting in a serious physical injury damaged by a malfunction or improper operation.
- Product specifications are subject to change without notice for improvement purposes.
- Keep this manual in a convenient location and refer to it whenever necessary in operating or maintaining the units.
- The end user of the actuator should have a copy of this manual.



Certified to ISO



SAFETY GUIDE

For RSF-B mini series, HA series
manufactured by Harmonic Drive Systems Inc



Read this manual thoroughly before designing the application, installation, maintenance or inspection of the actuator.



WARNING Indicates a potentially hazardous situation, which, if not avoided, could result in death or serious personal injury.



CAUTION Indicates a potentially hazardous situation, which, if not avoided, may result in minor or moderate personal injury and/or damage to the equipment.

LIMITATION OF APPLICATIONS:

The equipment listed in this document may not be used for the applications listed below:

- * Space equipment
- * Aircraft, aeronautic equipment
- * Nuclear equipment
- * Household apparatus
- * Vacuum equipment
- * Automobile, automotive parts
- * Amusement equipment
- * Machine or devices acting directly on the human body
- * Instruments or devices to transport or carry people
- * Apparatus or devices used in special environments
- * Instruments or devices to prevent explosion

Safety measures are essential to prevent accidents resulting in death, injury or damage of the equipment due to malfunction or faulty operation.

Precautions when using a direct drive motor

CAUTIONS FOR DIRECT DRIVE MOTOR AT APPLICATION DESIGNING

 CAUTION	Always use under followings conditions: <ul style="list-style-type: none"> • The motor is designed to be used for indoor. - Ambient temperature: 0°C to 40°C - Ambient humidity: 20% to 80%RH (Non-condensation) - Vibration: 24.5m/s² 以下 - No contamination by water, oil - No corrosive or explosive gas 	 CAUTION	Follow exactly the instructions to install the actuator in the equipment. <ul style="list-style-type: none"> • Ensure exact alignment of motor shaft center and corresponding center in the application. • Failure to observe this caution may lead to vibration, resulting in damage of output shaft.
-------------	---	-------------	--

CAUTION FOR DIRECT DRIVE MOTOR IN OPERATIONS

 CAUTION	Keep limited torques of the actuator. <ul style="list-style-type: none"> • Keep limited torques of the actuator. • Be aware to balance the gravity for load mounting to output shaft. 	 WARNING	Never connect cables directly to a power supply socket. <ul style="list-style-type: none"> • Direct drive motor cannot be operated unless it is connected to dedicated driver. • Never connect it to commercial power supply directly. Direct drive motor may be damaged and causes fire.
 CAUTION	Do not apply shocks to actuator. <ul style="list-style-type: none"> • Do not apply shocks because direct drive motor is directly connected to high precision encoder. • If the encoder is damaged, it may cause uncontrollable operation. 	 WARNING	Avoid handling of motor by cables. <ul style="list-style-type: none"> • Failure to observe this caution may damage the wiring, causing uncontrollable or faulty operation of direct drive motor.

Precautions when using a driver

CAUTIONS FOR DRIVERS AT APPLICATION DESIGNING

 CAUTION	Always use drivers under followings conditions: <ul style="list-style-type: none"> • Mount in a vertical position keeping sufficient distance to other devices to let heat generated by the driver radiate freely. - Ambient temperature: 0°C to 50°C - Ambient humidity: less than 90% RH (Non condensation) - No vibration or shocks - No dust, dirt, corrosive, inflammable or explosive gas 	 CAUTION	Use sufficient noise suppressing means and safe grounding. <ul style="list-style-type: none"> • Keep signal and power leads separated. - Keep leads as short as possible. - Ground actuator and driver at one single point, minimum ground resistance class: D (less than 100 ohms) - Do not use a power line filter in the motor circuit.
 CAUTION	Pay attention to negative torque by inverse load. <ul style="list-style-type: none"> • Inverse load may cause damages of direct drive motor. • Please consult our sales office, if you intent to apply products for inverse load. 	 CAUTION	Use a fast-response type ground-fault detector designed for PWM inverters. <ul style="list-style-type: none"> • Do not use a time-delay-type ground-fault detector.

CAUTION FOR DRIVERS IN OPERATIONS

 WARNING	Never change wiring while power is active. <ul style="list-style-type: none"> • Make sure of power non-active before servicing the products. • Failure to observe this caution may result in electric shock or personal injury. 	 WARNING	Do not touch terminals at least 5 minutes after turning OFF power. <ul style="list-style-type: none"> • Otherwise, residual electric charges may result in electric shock. Wait for 5 min or more before inspection. • Make installation of products not easy to touch their inner electric components.
 CAUTION	Do not make a voltage resistance test or megger test. <ul style="list-style-type: none"> • Failure to observe this caution may result in damage of the control unit. • Please consult our sales office, if you intent to make a voltage resistance test. 	 CAUTION	Do not operate control units by means of power ON/OFF switching. <ul style="list-style-type: none"> • Frequent power ON/OFF may result in deterioration of internal circuit elements. • Start/stop operation of direct drive motor should be performed via input signals.

DISPOSAL OF DIRECT DRIVE MOTOR, A MOTOR, A CONTROL UNIT AND/OR THEIR PARTS

 CAUTION	All products or parts have to be disposed of as industrial waste. <ul style="list-style-type: none"> • Since the case or the box of drivers have a material indication, classify parts and dispose them separately.
-------------	--

Contents

Chapter 1 Overview of the RSF-B mini series.....	1
1-1 Major characteristics.....	1
1-2 Ordering information	2
1-3 Combinations with drivers.....	2
1-4 Specifications of RSF supermini actuators	3
1-5 External dimensions of actuators	4
1-6 Mechanical accuracy	6
1-7 One-way positioning accuracy.....	7
1-8 Torsional stiffness	8
1-9 Detector resolution.....	9
1-10 Allowable load.....	10
1-10-1 Allowable radial load and allowable thrust load	10
1-10-2 Radial load when the operating point is different.....	10
1-11 Rotary direction.....	11
1-12 Impact resistance.....	11
1-13 Vibration resistance	11
1-14 Torque-speed characteristics.....	12
1-15 Cable specifications	14
Chapter 2 Installing the actuator	15
2-1 Receiving Inspection.....	15
2-2 Notice on handling	16
2-3 Location and installation	16
2-3-1 Environment of location	16
2-3-2 Installation.....	17
Chapter 3 Options	18
3-1 Relay cables	18
3-2 Connectors	19
Appendix 1 Unit conversion	App. 1-1
Appendix 2 Moment of inertia	App. 2-1
1. Calculation of mass and moment of inertia	App. 2-1
2. Moment of circular cylinder inertia.....	App. 2-3

Memo

Chapter 1 Overview of the RSF-B mini series

RSF-B mini series are AC servo actuators combined with a precision control reduction gear Harmonic Drive that provides high-torque and accurate rotation operation and a high-speed and high-response AC servo motor.

Use RSF-B mini series for robot joint drive, semi-conductor, liquid crystal panel manufacturer, machine tools and other various types of FA devices.

1-1 Major characteristics

◆ Small, lightweight, and high-torque

The RSF-B mini series with the precision-control deceleration device Harmonic Drive® realizes a small, lightweight, high torque and has a very high output torque for the outer dimensions compared to the direct driving method with a high-capacity motor alone.

◆ Superior positioning precision


The characteristics of the control deceleration device Harmonic Drive® such as non-backlash and superior positioning precision realize high-precision mechanisms.

◆ Stable controllability

The high deceleration gear ratio of the control deceleration device Harmonic Drive® provides stable controllability for large variations of load moment of inertia.

1-2 Ordering information

Model codes for the RSF-B mini series actuators are as follows:

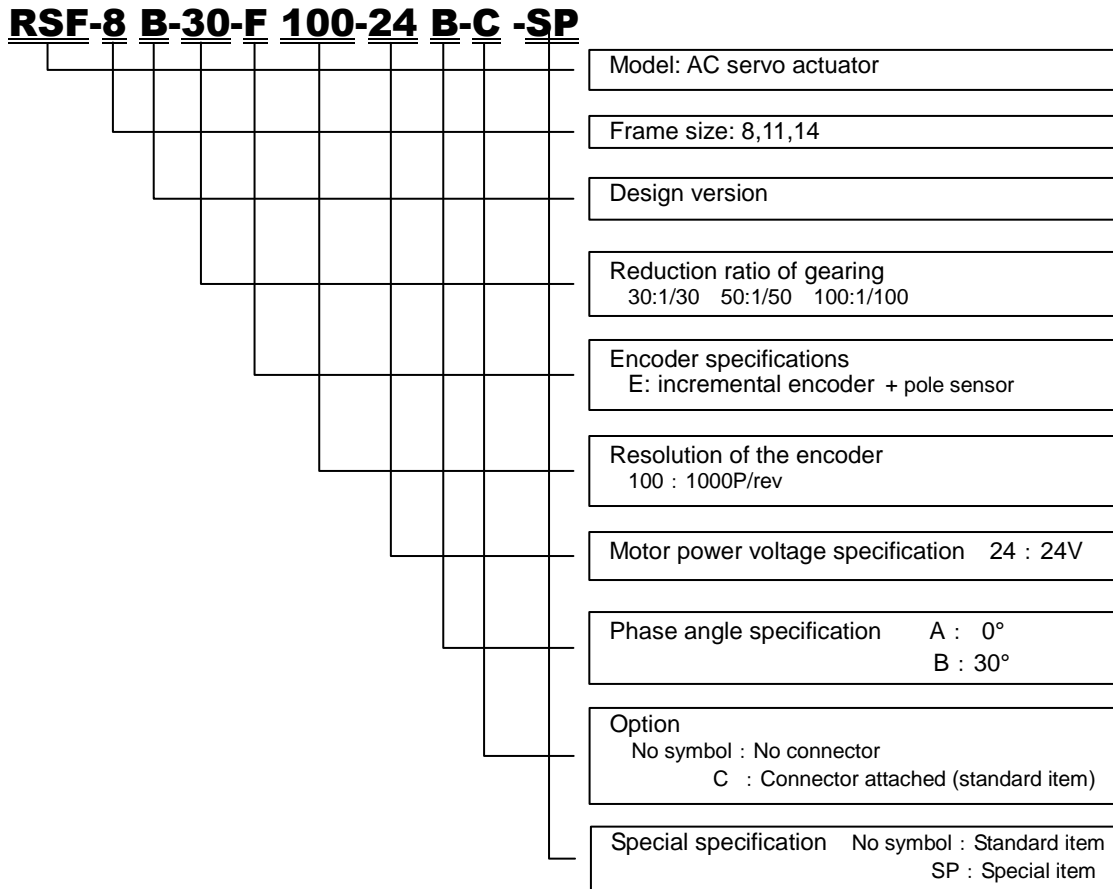

1-3 Combinations with drivers

RSF-B mini series actuators are combined with the following drivers. Setting of the driver varies depending on the actuator combined.

Actuator model name	Combined driver model name
RSF-8B	HA-680-4B-24
RSF-11B	HA-680-6B-24
RSF-14B	HA-680-6B-24



Do not combine an actuator that is different from that described on the nameplate of the driver.

Characteristics of the driver have been adjusted with the actuator. A combination of a different “driver” and an “actuator” may cause burnout of the actuator due to insufficient torque and overcurrent, injury and a fire.

1-4 Specifications of RSF-B mini actuators

Specifications of actuators are as follows:

Time rating:	Continuous	Service temperature:	0~40°C
Excitation method:	Permanent magnet type	Storage temperature:	-20~+60°C
Insulation class:	B	Service/ storage temp.:	20~80%RH (no condensation)
Withstanding voltage:	500VAC/min	Vibration resistance:	25m/s ²
Insulation resistance:	500VDC 100MΩ or more	Lubricant:	Grease (Harmonic Grease)
Structure:	Totally enclosed self cooling type		

Item	Model	RSF-8B			RSF-11B			RSF-14B			
		30	50	100	30	50	100	30	50	100	
Rated output *	W	7.7	8.2	6.3	11.5	12.6	12.6	17.8	18.9	18.9	
Input power voltage *	V	24DC±10%									
Rated current *	A	2.0		1.5	5.0	4.9		4.9	4.7		
Rated torque *	Nm	0.78	1.4	2.0	1.1	2.0	4.0	1.7	3.0	6.0	
	kgfcm	8.2	14	29	11	20	41	17	31	61	
Rated rotating speed *	r/min	100	60	30	100	60	30	100	60	30	
Stall torque	Nm	0.95	1.7	3.5	1.7	3.0	5.7	2.5	4.5	9.0	
	kgfcm	9.3	17	36	17	31	58	26	46	92	
Instantaneous maximum current *	A	3.8	3.9	2.9	14.4	15.8	9.4	14.4	17.2	12.3	
Instantaneous maximum torque *	Nm	1.8	3.3	4.8	4.5	8.3	11	9.0	18	28	
	kgfcm	18	34	49	46	85	112	92	184	286	
Max. speed *	r/min	200	120	60	200	120	60	200	120	60	
Torque constant	Nm/A	0.62	1.1	2.1	0.40	0.66	1.5	0.76	1.3	2.6	
	kgfcm/A	6.3	11	21	4.1	6.7	15	7.8	13	27	
MEF constant	V/(r/min)	0.07	0.11	0.22	0.04	0.07	0.15	0.08	0.13	0.28	
Phase resistance	Ω(20°C)	0.93			0.19			0.26			
Phase inductance	mH	0.45			0.10			0.19			
Moment of inertia Note	GD ² /4	kgm ²	0.06 ×10 ⁻²	0.16 ×10 ⁻²	0.65 ×10 ⁻²	0.18 ×10 ⁻²	0.49 ×10 ⁻²	2.0 ×10 ⁻²	0.41 ×10 ⁻²	1.1 ×10 ⁻²	4.5 ×10 ⁻²
	J	kgfcm ²	0.60 ×10 ⁻²	1.7 ×10 ⁻²	6.6 ×10 ⁻²	1.8 ×10 ⁻²	5.0 ×10 ⁻²	20 ×10 ⁻²	4.1 ×10 ⁻²	11 ×10 ⁻²	46 ×10 ⁻²
Allowable radial load	N	196			245			392			
	kgf	20			25			40			
Allowable thrust load	N	98			196			392			
	kgf	10			20			40			
Encoder pulses (motor shaft)	p/rev	1000									
Encoder resolution (Output shaft) Note 5	p/rev	120,000	200,000	400,000	120,000	200,000	400,000	120,000	200,000	400,000	
Mass	g	300			500			800			
Combined driver		HA-680-4B-24			HA-680-6B-24						

Note 1: The table shows typical output values of actuators including the efficiency of Harmonic Drive.

Note 2: The values in the table above are obtained when it is combined with the combined driver (HA-680-4B-24) and the actuator is mounted on the aluminum radiator plate (150 x 150 x 6(mm)).

Note 3: Values indicated by an asterisk (*) are those for the saturated temperature rise. Other values indicate the temperature at 20°C. All values are typical.

Note 4: The moment of inertia is the total value of the motor shaft and Harmonic Drive moment of inertia values converted to the output side.


Note 5: The encoder resolution is (motor shaft encoder resolution when multiplied by 4) x (gear ratio).

1-5 External dimensions of actuators


The external drawings are shown as follows:

Unit : mm (third angle projection method)

■ RSF-8B

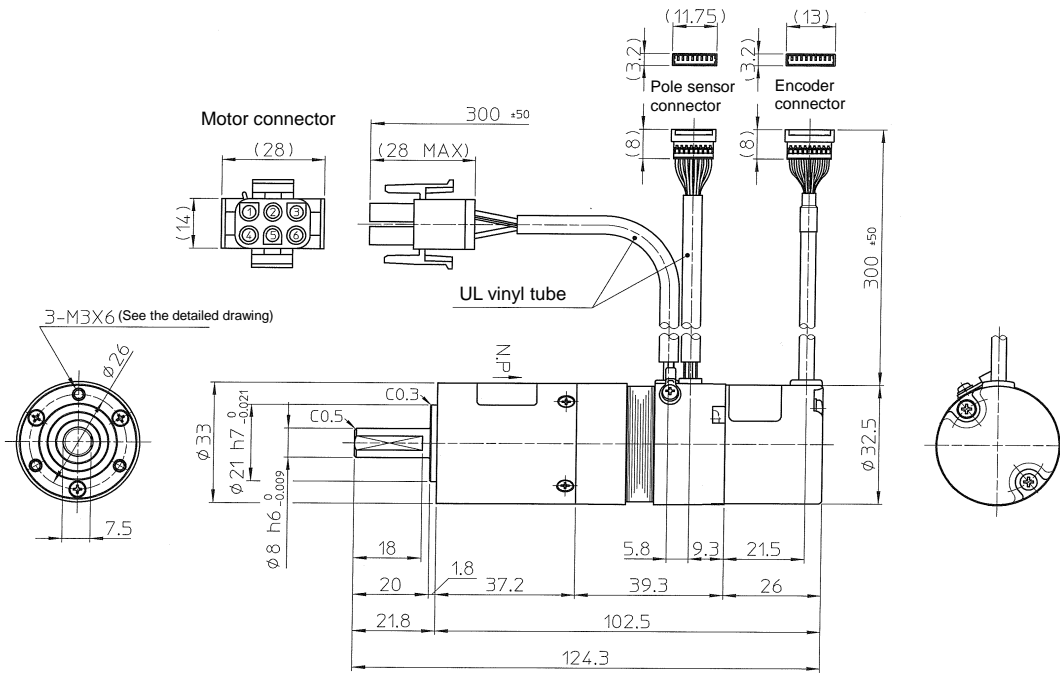


■ RSF-11B

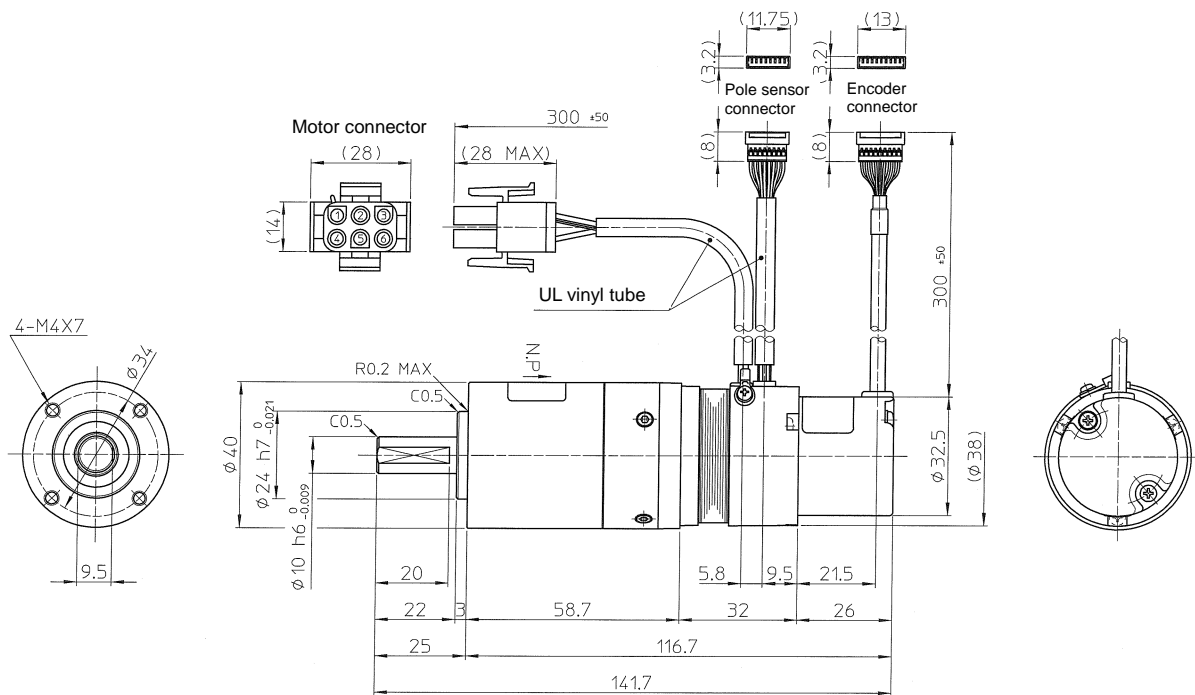

Note) For detailed outside dimensions, check the delivery specification drawing issued by us

■ RSF-14B

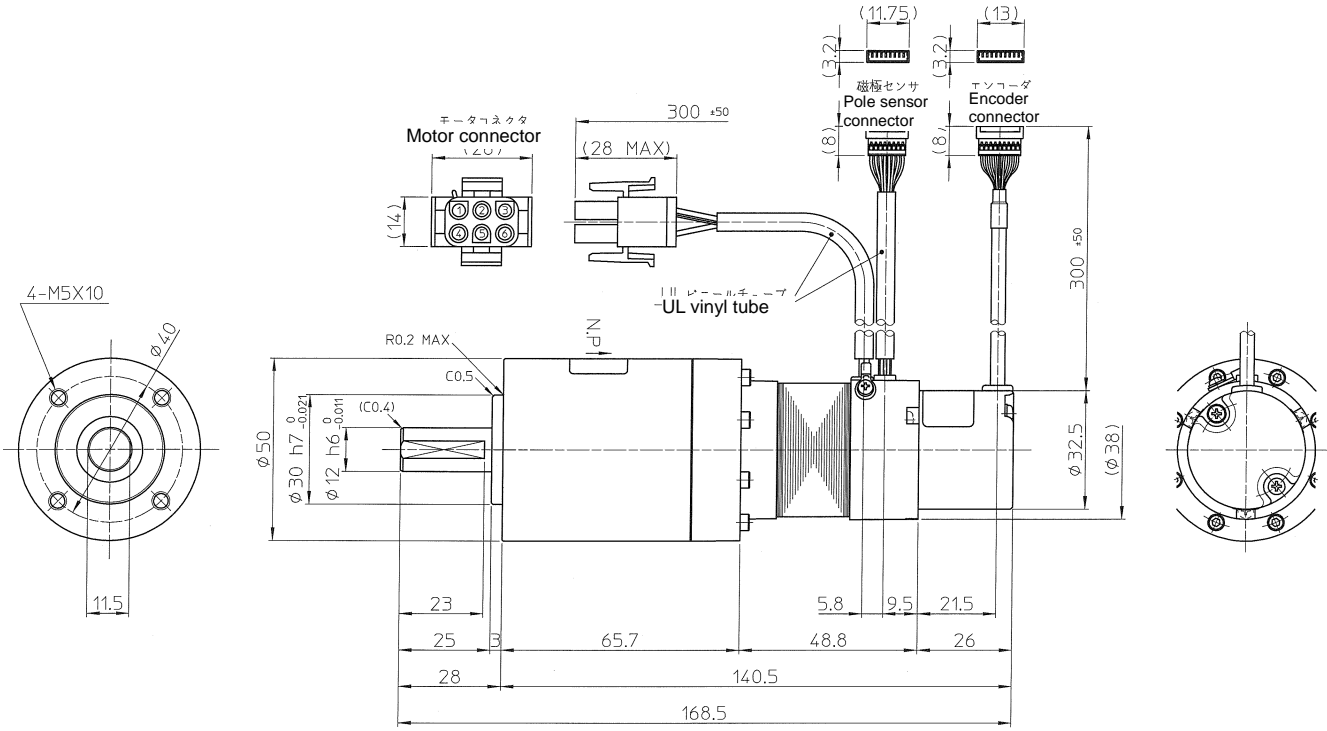

Note) For detailed outside dimensions, check the delivery specification drawing issued by us.

1-6 Machine accuracy

The machining accuracy of the output flange and the mounting flange of RSF-B mini actuators are indicated in the table below.


Machine accuracy		Unit : mm	
	A	B	C
RSF-8B	0.04	0.04	0.03
RSF-11B	0.04	0.04	0.03
RSF-14B	0.04	0.04	0.03

Note) Values by T.I.R.(Total Indicator Reading)

A : Squareness of the output shaft and the mounting surface

B : Coaxial degree of the output shaft and the mounting connection

C : Deflection of the output shaft end

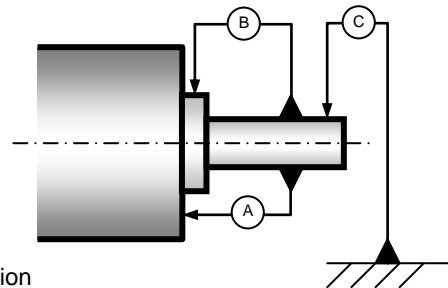

1-7 One-way positioning accuracy

The following table shows the “one-way positioning accuracy”.
The following table contains representing values. (JIS B 6201:1987)

The one-way positioning accuracy of RSF-B mini actuators is almost equal to the angular positioning accuracy of the Harmonic® drive gearing, because the effect on the positioning error of the built-in motor is reduced by the gearing.

The accuracy for each gear ratio is shown below.


Item	Mode	RSF-8B			RSF-11B			RSF-14B		
		30	50	100	30	50	100	30	50	100
One-way positioning accuracy	arc min	3	2.5	2.5	2	2.5	2	2.5	2	2
	rad	8.73×10^{-4}	7.27×10^{-4}	7.27×10^{-4}	5.82×10^{-4}	7.27×10^{-4}	5.82×10^{-4}	7.27×10^{-4}	5.82×10^{-4}	5.82×10^{-4}

■ Reference

(Accuracy display and measurement method according to JIS B 6201: 1987)

● One-way positioning of rotation shaft motion


First, perform positioning at any one position in a fixed direction. This position is the reference position. Next, perform positioning in succession in the same direction, and measure the difference between the angle actually rotated from the reference position and the desired angle at each position. The maximum difference in one rotation among these values is taken as the measurement value. Measurement of equipment with the continuous positioning function for rotational motion shall be done once per 30 degrees or 12 positions throughout the entire rotation range as a rule.

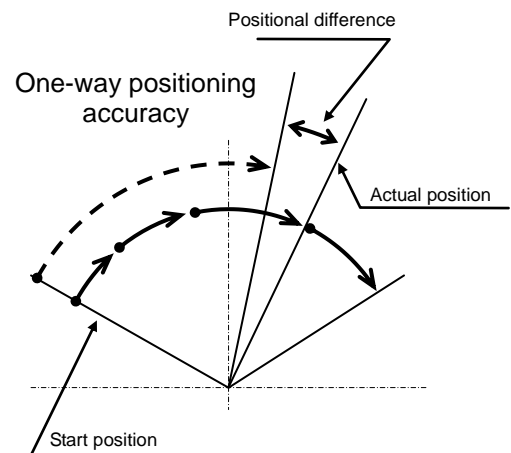

1-8 Torsional stiffness

When a torque is applied to the output flange of the actuator with the motor locked, the resulting torsional wind up is near proportional to the torque.

The upper right figure shows the torsional stiffness characteristics of the output flange applying torque starting from zero to plus side [+T₀] and minus side [-T₀]. This trajectory is called torque-torsion characteristics which typically follows a loop 0→A→B→A'→B'→A as illustrated. The torsional stiffness of the RSF-B mini actuator is expressed by the slope of the curve that is a spring rate (wind-up) (unit:N·m/rad).

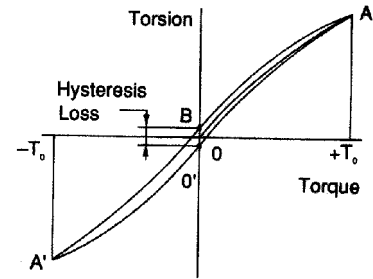

The torsional stiffness may be evaluated by dividing torque-torsion characteristics curve into three major regions. The spring rate of each region is expressed K₁, K₂, and K₃ respectively.


K₁: spring rate for torque region 0-T₁

K₂: spring rate for torque region T₁-T₂

K₃: spring rate for torque region over T₂

The wind-up for each region is expressed as follows:

- ◆ wind-up for torque region 0-T₁: $\varphi = \frac{T}{K_1}$
- ◆ wind-up for torque region T₁-T₂: $\varphi = \theta_1 + \frac{T - T_1}{K_2}$
- ◆ wind-up for torque region over T₂: $\varphi = \theta_2 + \frac{T - T_2}{K_3}$

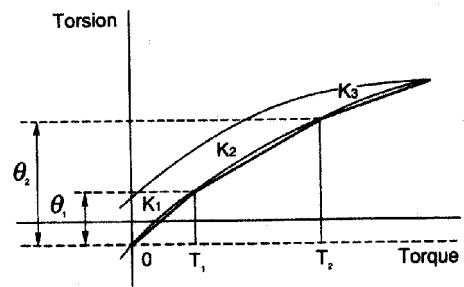

The following table shows average values of T₁ through T₃, K₁ through K₃, and θ₁ through θ₂ for different gear ratios.

Model		RSF-8B			RSF-11B			RSF-14B		
Gear ratio		1 : 30	1 : 50	1 : 100	1 : 30	1 : 50	1 : 100	1 : 30	1 : 50	1 : 100
T ₁	Nm	0.29			0.80			2.0		
	kgfm	0.03			0.082			0.2		
K ₁	x10 ⁻⁴ Nm/rad	0.034	0.44	0.091	0.084	0.22	0.27	0.19	0.34	0.47
	kgf·m/arc min	0.010	0.013	0.027	0.025	0.066	0.080	0.056	0.1	0.14
θ ₁	x10 ⁻⁴ rad	8.5	6.6	3.2	9.5	3.6	3.0	10.5	5.8	4.1
	arc min	3.0	2.3	1.1	3.3	1.2	1.0	3.6	2.0	1.4
T ₂	Nm	0.75			2.0			6.9		
	kgf·m	0.077			0.20			0.7		
K ₂	x10 ⁻⁴ Nm/rad	0.044	0.067	0.10	0.037	0.30	0.34	0.24	0.47	0.61
	kgfm/arc min	0.013	0.020	0.031	0.13	0.090	0.10	0.07	0.14	0.18
θ ₂	x10 ⁻⁴ rad	19	13	8	19	8	6	31	16	12
	arc min	6.6	4.7	2.6	6.5	2.6	2.2	10.7	5.6	4.2
K ₃	x10 ⁻⁴ Nm/rad	0.054	0.084	0.12	0.047	0.32	0.44	0.34	0.57	0.71
	kgfm/arc min	0.016	0.025	0.036	0.16	0.096	0.13	0.10	0.17	0.21

1-9 Detector resolution

An encoder with 1000 pulses per rotation is incorporated in the motor unit of the RSF-B mini series actuators, and the motor output is decelerated by the precision control decelerator Harmonic Drive®. Therefore, the resolution per one rotation of the actuator output shaft is multiplied by gear ratio of the actual encoder resolution. In addition, the encoder signal is electrically multiplied by 4.

The following table shows the resolution at the output shaft for different gear ratios.

Item		Model	RSF- 8B RSF-11B RSF-14B		
			1 : 30	1 : 50	1 : 100
Gear ratio			1 : 30	1 : 50	1 : 100
Detector resolution (when multiplied by 4))	Pulse/Rotation		120,000	200,000	400,000
Angle per one pulse	Second		About 10.8	About 6.5	About 3.2

1-10 Allowable load


1-10-1 Allowable radial load and allowable thrust load

The allowable radial load and thrust load of the output shaft are shown below.

The allowable radial load F_r is obtained with respect to the center ($L/2$) 0 point of the output shaft.

The values in the following table are designed by considering the life of the bearing.

The allowable values must not be exceeded.

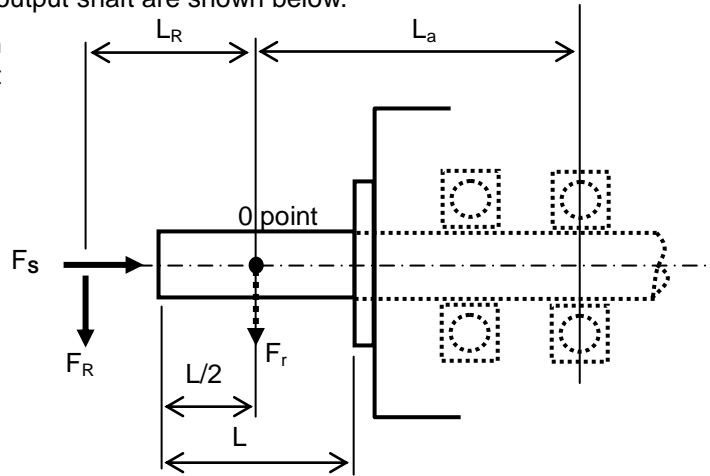

Model		RSF-8B	RSF-11B	RSF-14B
Allowable radial load (F_r)	N	196	245	392
	kgf	20	25	40
Allowable thrust load (F_s)	N	98	196	392
	kgf	10	20	40

1-10-2 Radial load when the operating point is different

If the operating point of radial load is different, the allowable radial load value is also different.

The relation between radial load position L_R and allowable radial value F_R is obtained from the following formula.

The allowable values must not be exceeded.

$$F_R = \frac{L_a}{L_a + L_R} F_r$$

F_R : Allowable radial load at distance L_R from the 0 point [N]

F_r : Allowable radial load at the 0 point [N]

L_a : Distance from the bearing starting point to the 0 point [mm]

L_R : Distance from the position where radial load is exerted to the 0 point [mm]

L : Shaft length [mm]

Model		RSF-8B	RSF-11B	RSF-14B
Allowable radial load (F_r)	N	196	245	392
	kgf	20	25	40
L_a	mm	23	30.5	43.2
L	mm	20	22	25


1-11 Rotary direction

The rotary direction of the RSF-B mini series actuators when a forward rotation command is given from the HA-680 driver is forward rotation seen from the output shaft side (i.e. counterclockwise: CW).

The rotary direction of the HA-680 can be switched by using the Parameter → “20: Rotary direction command” setting.

“20: Rotary direction command” setting

Value	FWD command	REV command	Setting
0	FWD rotation	REV rotation	Default
1	REV rotation	FWD rotation	

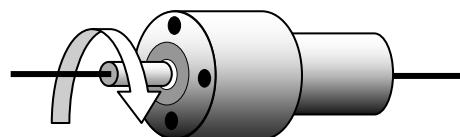

FWD: CW rotation

* The model shape is RSF-5A. RSF-3A is also the same.

* For details of the driver, refer to “AC Servo Driver HA-680 Series Technical Data.”

1-12 Impact resistance


The impact resistance of the actuators is as follows.

Impact acceleration: 300 m/s^2

Direction: top/bottom, right/left, front/back

Repeating times: three

However, do not apply impact to the output shaft.

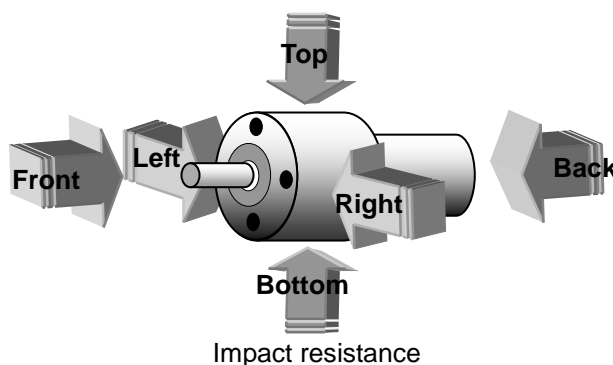

Impact resistance


1-13 Vibration resistance

The vibration resistance of the actuators for up/down, left/right, and front/back is as follows.

Vibration acceleration: 25 m/s^2 (5G)

Frequency: 10~400Hz

This specification does not guarantee fretting wear of mechanism components due to micro vibrations.

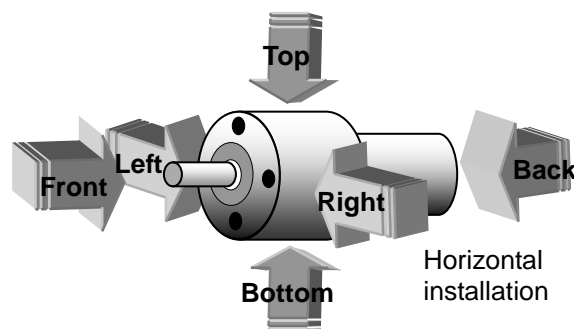

Vibration resistance

1-14 Torque-speed characteristics






The following graphs show the usable ranges of the RSF-B mini series actuators combined with the dedicated AC servo driver HA-680 by the power voltage 24VDC input.





1) Continuous duty range:

The range allows continuous operation for the actuator.

2) Repeated use range:

The range allows repeated operation for the actuator. This range is used for acceleration and deceleration.

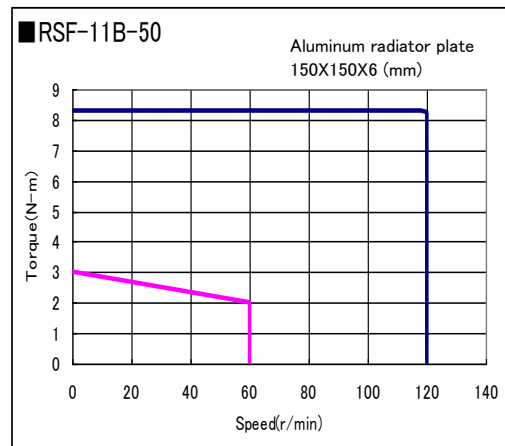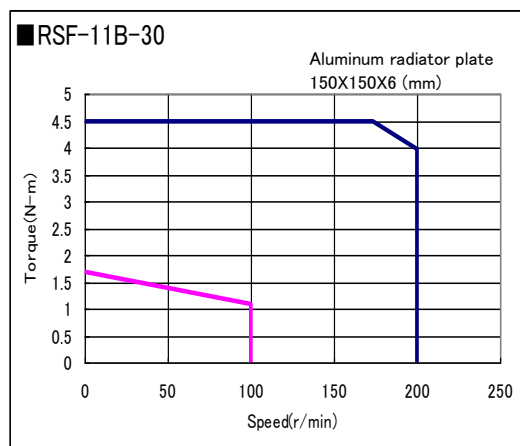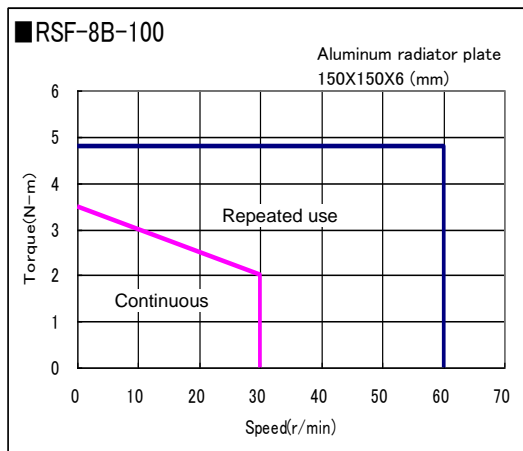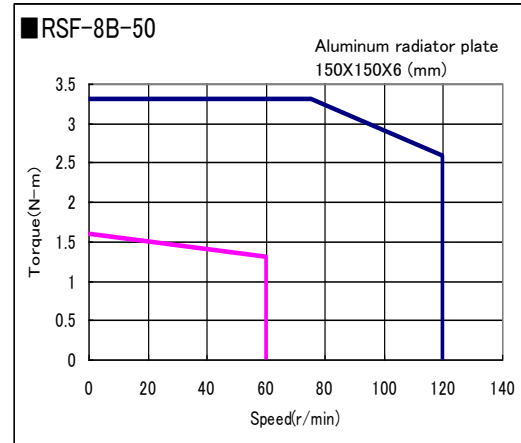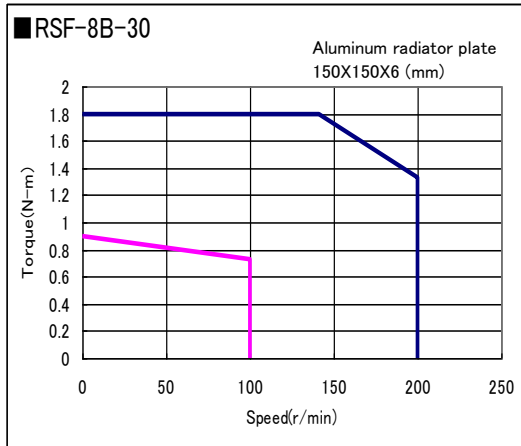

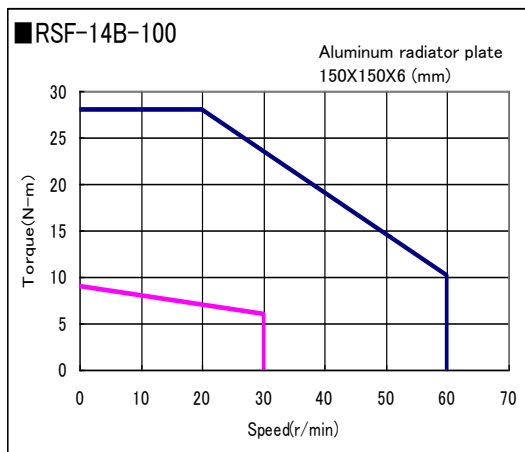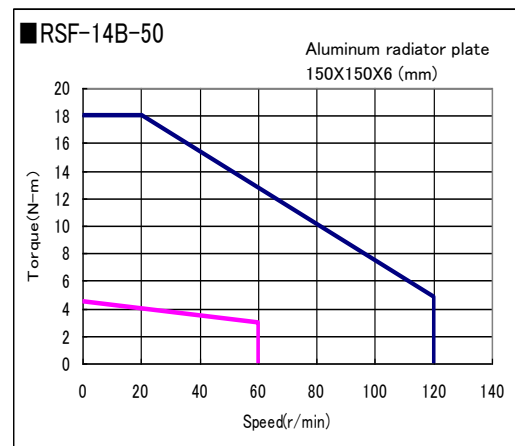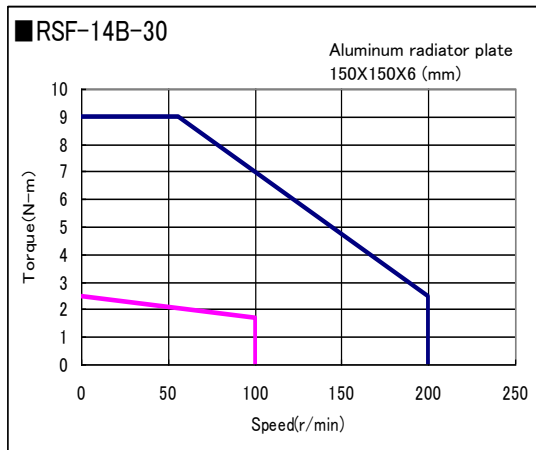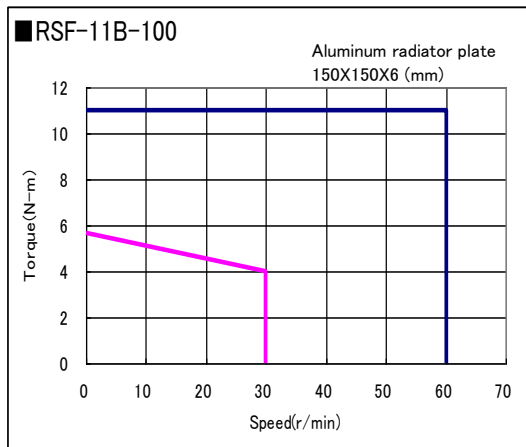

Note: Even in the continuous range, if it is used continuously in one direction, please consult with us.

1-15 Cable specifications

The following tables show specifications of the cable for the motor and the encoder of the RSF-B mini actuators.

Motor connector cable

Pin No.	Color	Signal name
1	Red (RED)	U
2	White (WHT)	V
3	Black (BLK)	W
4	Green (GRN)	E
5	—	—
6	—	—

Connector used Plug: 350715-1(AMP)
 Pin: 350690-1(AMP)

Pole sensor connector cable

Pin No.	Color	Signal name
1	Brown	U+
2	Blue	U-
3	Red	V+
4	Green	V-
5	Yellow	W+
6	Orange	W-
7	White	DC +5V±5%
8	Black	COMMON

Connector used Housing: 51047-0800(Molex)
 Terminal: 50133-8000(Molex)

Encoder connector cable

Pin No.	Color	Signal name
1	Brown	A+
2	Blue	A-
3	Red	B+
4	Green	B-
5	Yellow	Z+
6	Orange	Z-
7	White	DC +5V±5%
8	Black	COMMON
9	Shield	FG

Connector used Housing: 51047-0900(Molex)
 Terminal: 50133-8000(Molex)


Chapter 2 Installing the actuator

2-1 Receiving Inspection

Check the following when products are received.

- Inspection procedure
- (1) Check the shipping container and item for any damage that may have been caused during transportation. If the item is damaged, immediately report the damage to the dealer it was purchased from.
- (2) A label is attached on the right side of the RSF-B mini series actuator. Confirm the products you ordered by comparing with the model on the [TYPE] line of the label. If it is different, immediately contact the dealer it was purchased from.

The model code is interpreted as follows:

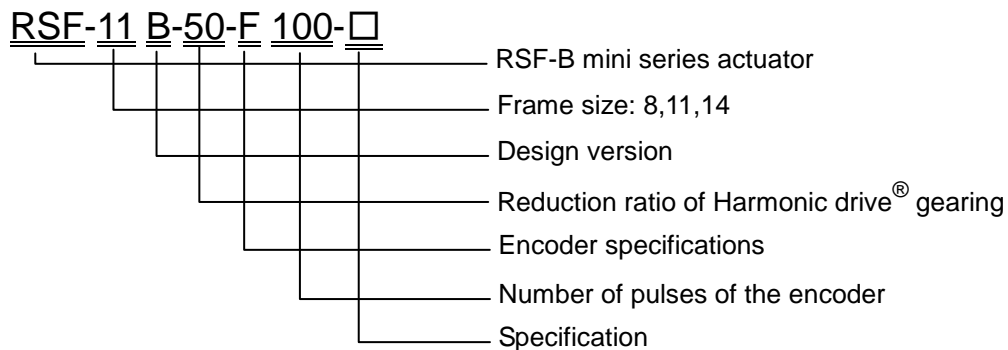

For details of model symbols, refer to "1-2 Models" on page 2.

- (3) The model code of the RSF-B mini series actuator to be driven is indicated on the [ADJUSTED FOR USE WITH] line of the driver label. Match the actuator with its driver so as not to confuse the item with the other actuators.



Only connect the actuator specified on the driver label.

The drivers have been tuned for the actuator specified on the driver label. Wrong combination of "drivers" and "actuators" may cause low torque problems or over current that may cause physical injury and fire.

- (4) The [INPUT VOL.] line of the driver label indicates the power supply voltage value to be input to the driver.

The value 24 means 24VDC power supply.

If the power supply voltage written on the label differs from the power supply voltage to be connected to, immediately contact the dealer it was purchased from.



Do not connect a supply voltage other than the voltage specified on the label.

The wrong power supply voltage from those written on the label may damage the driver resulting physical injury and fire.

2-2 Notice on handling

Handle RSF-B mini series actuators with care, specifically:



Do not plug the actuators directly into a commercial line power source.

This could burn out the actuator, potentially resulting in a fire and/or electrical hazard.



(1) Do not apply impact or unnecessary excessive force to output flange of actuators.

(2) Do not put actuators on in a location where the driver could easily fall.

(3) The allowable temperature for storage is from -20°C to +60°C. Do not expose it to the sunlight for a long time and do not store it in areas with widely fluctuating temperatures.

(4) The allowable relative humidity for storage is 80% or less. Do not store it in highly humid place or in a place where temperature changes excessively during the course of a day.

(5) Do not store units in locations with corrosive gas or particles.

2-3 Location and installation

2-3-1 Environment of location

The environmental conditions of the location for RSF-B mini series actuators must be as follows.

- ◆ Service temperature: 0°C to 40°C
When the actuator is installed in a closed space, the temperature in the space may be higher than the atmosphere because of heat emission by the actuator. Design the closed space size, ventilation system, and device locations so the ambient temperature near the actuator is always 40°C or less.
- ◆ Service humidity: 20 to 80% relative humidity, without condensation
Make sure no water condensation occurs at the place where there is a large temperature change in a day or due to frequent heat-and-cool cycles due to the operation of the actuator.
- ◆ Vibration: 25 m/sec² (10Hz~400Hz) or less
- ◆ Impact: 300 m/sec² or less
- ◆ Make sure the actuator is in an area free from: dust, water condensation, metal powder, corrosive gas, water, water drops, and oil mist.
- ◆ Locate the driver indoors. Do not expose it to the sunlight.

2-3-2 Installation

Since the RSF-B mini series actuator is a high precision servo mechanism, great care is required for proper installation.


Install the actuator taking care not to damage accurately machined surfaces. Do not hit the actuator with a hammer. Take note that actuators provide a glass encoder, which may be damaged by impact.

● Procedure

- (1) Align the axis of rotation of the actuator and the load mechanism precisely.

Note 1: Very careful alignment is required especially when a rigid coupling is applied. Slight differences between centerlines will cause failure of the output shaft of the actuator.

Note 2: When installing the actuator to a coupling, use a plastic hammer to avoid excessive physical shocks.

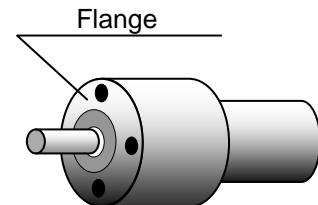

- (2) Fasten the flange of the actuator with flat washers and high strength bolts. Use a torque wrench when tightening the fasteners.

The recommended tightening torque is shown in the table below:

Item		Model	RSF-8B	RSF-11B	RSF-14B
Number of bolt holes			3	4	4
Wrenching torque	Bolt; Hole depth		M3; Depth: 6mm	M4; Depth: 7mm	M5; Depth: 10mm
	Nm		1.4	3.2	6.3
	kgfcm		14	33	64

- (3) For wiring operation, refer to the “Technical Data” of the driver.
- (4) Motor cable and encoder + magnetic sensor cable
Do not pull the cable. Do not hang the actuator with the cable. If you do, the connection part may be damaged. Install the cable with slack not to apply tension to the actuator. Especially, do not use the actuator under any condition where the cable is bent repeatedly.



Do not disassemble and re-assemble the actuator.

As many precision components are used, the Harmonic Drive Systems, Inc. does not guarantee the actuator that has been reassembled by others than the authorized persons by the Harmonic Drive Systems, Inc.

Chapter 3 Options

3-1 Relay cables

There are relay cables that connect the RSF-B mini series actuator and driver.

There are 2 types of relay cables for motors and an incremental encoder + pole sensor. Note that the model and shape vary depending on the connecting driver.


● **Relay cable type** (XX indicates the cable length 3m, 5m, or 10m.)

■ Connecting driver: HA-680 series

① For motors:

EWC-MB**-A06-TN2


Cable length (03=3m, 05=5m, 10=10m)

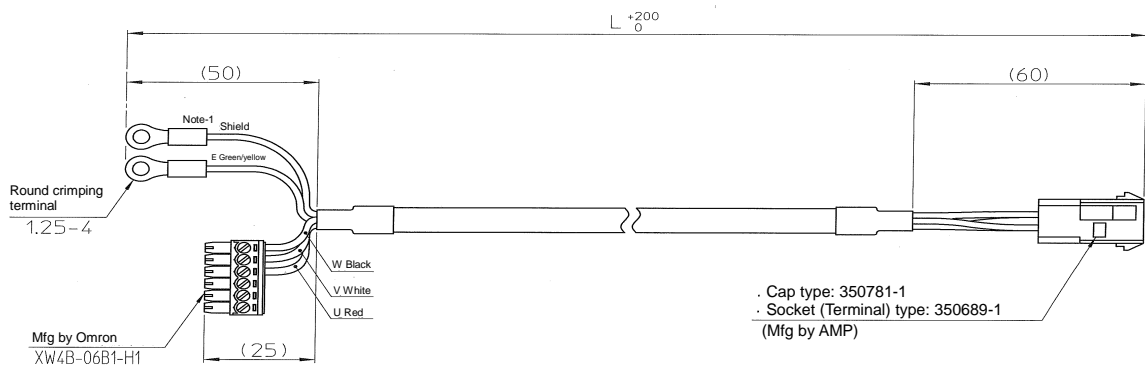

② For an incremental encoder + pole sensor:

EWB-F**-M0809-3M14


Cable length (03=3m, 05=5m, 10=10m)

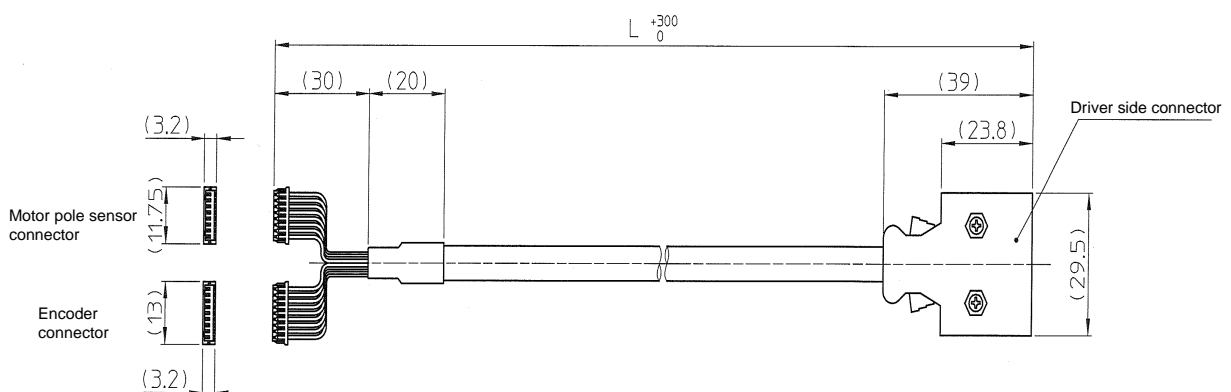

3-2 Connectors

■ Connecting driver: Connectors for CN1, CN2, motor wire connection and the power supply connection of the HA-680 driver

- Connector type: CNK-HA68-S1
For CN1, CN2, motor wire connection, power supply connection 4 types
- Connector type: CNK-HA68-S2
For CN2, power supply connection 2 types

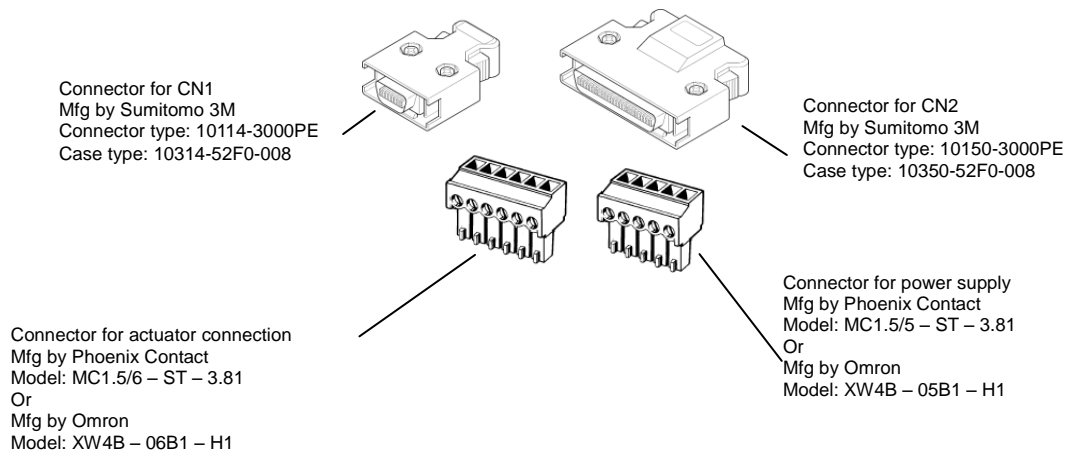

Appendix 1 Conversion of unit

This technical manual basically uses the SI unit system. The conversion coefficients between the SI unit system and other unit systems are shown below.

(1) Length

SI unit	m	
	↓	
Unit	ft.	in.
Coefficient	3.281	39.37

Unit	ft.	in.
Coefficient	0.3048	0.0254
	↓	
SI unit	m	

(2) Linear speed

SI unit	m/s			
	↓			
Unit	m/min	ft./min	ft./s	in/s
Coefficient	60	196.9	3.281	39.37

Unit	m/min	ft./min	ft./s	in/s
Coefficient	0.0167	5.08×10^{-3}	0.3048	0.0254
	↓			
SI unit	m/s			

(3) Linear acceleration

SI unit	m/s^2			
	↓			
Unit	m/min^2	$ft./min^2$	$ft./s^2$	in/s^2
Coefficient	3600	1.18×10^4	3.281	39.37

Unit	m/min^2	$ft./min^2$	$ft./s^2$	in/s^2
Coefficient	2.78×10^{-4}	8.47×10^{-5}	0.3048	0.0254
	↓			
SI unit	m/s^2			

(4) Force

SI unit	N		
	↓		
Unit	kgf	lb (force)	oz (force)
Coefficient	0.102	0.225	4.386

Unit	kgf	lb (force)	oz (force)
Coefficient	9.81	4.45	0.278
	↓		
SI unit	N		

(5) Mass

SI unit	kg	
	↓	
Unit	lb.	oz.
Coefficient	2.205	35.27

Unit	lb.	oz.
Coefficient	0.4535	0.02835
	↓	
SI unit	kg	

(6) Angle

SI unit	rad		
Unit	Deg.	Min.	Sec.
Coefficient	57.3	3.44×10^3	2.06×10^5

Unit	Deg.	Min.	Sec.
Coefficient	0.01755	2.93×10^{-4}	4.88×10^{-6}
SI unit	rad		

(7) Angular speed

SI unit	rad/s			
Unit	Deg./s	Deg./min	r/s	r/min
Coefficient	57.3	3.44×10^3	0.1592	9.55

Unit	Deg./s	Deg./min	r/s	r/min
Coefficient	0.01755	2.93×10^{-4}	6.28	0.1047
SI unit	rad/s			

(8) Angular acceleration

SI unit	rad/s ²	
Unit	Deg./s ²	Deg./min ²
Coefficient	57.3	3.44×10^3

Unit	Deg./s ²	Deg./min ²
Coefficient	0.01755	2.93×10^{-4}
SI unit	rad/s ²	

(9) Torque

SI unit	Nm			
Unit	kgfm	lbft	lbin	ozin
Coefficient	0.102	0.738	8.85	141.6

Unit	kgfm	lbft	lbin	ozin
Coefficient	9.81	1.356	0.1130	7.06×10^{-3}
SI unit	Nm			

(10) Moment of inertia

SI unit	kgm ²							
Unit	kgfms ²	kgfcms ²	lbft ²	lbfts ²	lbin ²	lbins ²	ozin ²	ozins ²
Coefficient	0.102	10.2	23.73	0.7376	3.42×10^3	8.85	5.47×10^4	141.6

Unit	kgfms ²	kgfcms ²	lbft ²	lbfts ²	lbin ²	lbins ²	ozin ²	ozins ²
Coefficient	9.81	0.0981	0.0421	1.356	2.93×10^{-4}	0.113	1.829×10^{-5}	7.06×10^{-3}

SI unit	kgm ²							
---------	------------------	--	--	--	--	--	--	--

(11) Torsional spring constant, moment of rigidity

SI unit	Nm/rad				
Unit	kgfm/rad	kgfm/arc min	kgfm/Deg.	lbft/Deg.	lbin/Deg.
Coefficient	0.102	2.97×10^{-5}	1.78×10^{-3}	0.0129	0.1546

Unit	kgfm/rad	Kgfm/arc min	kgfm/Deg.	lbft/Deg.	lbin/Deg.
Coefficient	9.81	3.37×10^4	562	77.6	6.47

SI unit	Nm/rad				
---------	--------	--	--	--	--

Appendix 2 Calculations of moment of inertia

1. Calculation formulas for mass and moment of inertia

(1) When center of revolution and line of center of gravity match

Calculation formulas for mass and moment of inertia are shown below.









m: Mass (kg)

I_x, I_y, I_z : moment of inertia (kgm^2) making Axes x, y and z as centers of revolution





G: Distance from edge surface of center of gravity

ρ : Specific gravity

Units - Length: m, mass: kg, moment of inertia: kgm^2

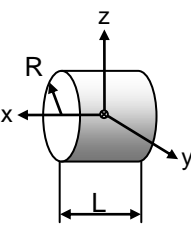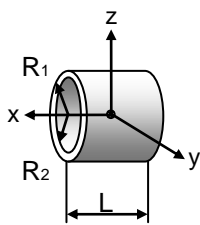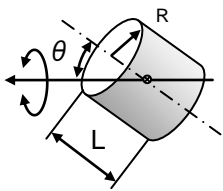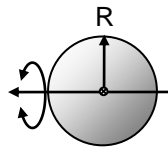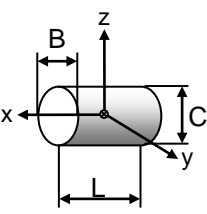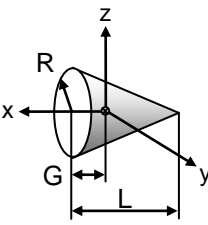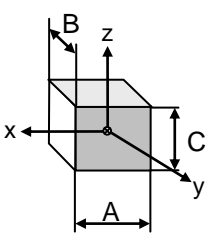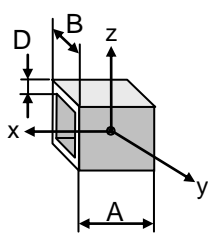Shape of object	Mass, inertia, position of center of gravity	Shape of object	Mass, inertia, position of center of gravity
<p>Circular cylinder</p> 	$m = \pi R^2 L \rho$ $I_x = \frac{1}{2} m R^2$ $I_y = \frac{1}{4} m \left(R^2 + \frac{L^2}{3} \right)$ $I_z = \frac{1}{4} m \left(R^2 + \frac{L^2}{3} \right)$	<p>Round pipe</p>  <p>R1: Outside diameter R2: Inside diameter</p>	$m = \pi (R_1^2 - R_2^2) L \rho$ $I_x = \frac{1}{2} m (R_1^2 + R_2^2)$ $I_y = \frac{1}{4} m \left\{ (R_1^2 + R_2^2) + \frac{L^2}{3} \right\}$ $I_z = \frac{1}{4} m \left\{ (R_1^2 + R_2^2) + \frac{L^2}{3} \right\}$
<p>Tilted circular cylinder</p> 	$m = \pi R^2 L \rho$ $I_\theta = \frac{1}{12} m \times \left\{ 3R^2 (1 + \cos^2 \theta) + L^2 \sin^2 \theta \right\}$	<p>Sphere</p> 	$m = \frac{4}{3} \pi R^3 \rho$ $I = \frac{2}{5} m R^2$
<p>Elliptic circular cylinder</p> 	$m = \frac{1}{4} \pi B C L \rho$ $I_x = \frac{1}{16} m (B^2 + C^2)$ $I_y = \frac{1}{4} m \left(\frac{C^2}{4} + \frac{L^2}{3} \right)$ $I_z = \frac{1}{4} m \left(\frac{B^2}{4} + \frac{L^2}{3} \right)$	<p>Cone</p> 	$m = \frac{1}{3} \pi R^2 L \rho$ $I_x = \frac{3}{10} m R^2$ $I_y = \frac{3}{80} m (4R^2 + L^2)$ $I_z = \frac{3}{80} m (4R^2 + L^2)$ $G = \frac{L}{4}$
<p>Prism</p> 	$m = A B C \rho$ $I_x = \frac{1}{12} m (B^2 + C^2)$ $I_y = \frac{1}{12} m (C^2 + A^2)$ $I_z = \frac{1}{12} m (A^2 + B^2)$	<p>Regular square pipe</p> 	$m = 4 A D (B - D) \rho$ $I_x = \frac{1}{3} m \left\{ (B - D)^2 + D^2 \right\}$ $I_y = \frac{1}{6} m \left\{ \frac{A^2}{2} + (B - D)^2 + D^2 \right\}$ $I_z = \frac{1}{6} m \left\{ \frac{A^2}{2} + (B - D)^2 + D^2 \right\}$

Appendix 2 Calculations of moment of inertia

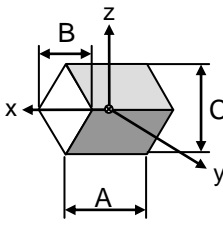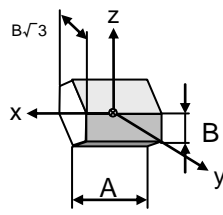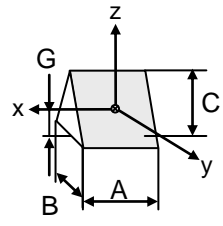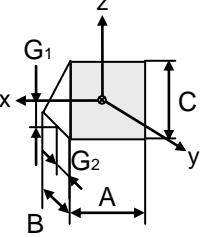Shape of object	Mass, inertia, position of center of gravity	Shape of object	Mass, inertia, position of center of gravity
	$m = \frac{1}{2} ABC \rho$ $I_x = \frac{1}{24} m (B^2 + C^2)$ $I_y = \frac{1}{24} m (C^2 + 2A^2)$ $I_z = \frac{1}{24} m (B^2 + 2A^2)$		$m = \frac{3\sqrt{3}}{2} AB^2 \rho$ $I_x = \frac{5}{12} m B^2$ $I_y = \frac{1}{12} m \left(A^2 + \frac{5}{2} B^2 \right)$ $I_z = \frac{1}{12} m \left(A^2 + \frac{5}{2} B^2 \right)$
	$m = \frac{1}{2} ABC \rho$ $I_x = \frac{1}{12} m \left(\frac{B^2}{2} + \frac{2}{3} C^2 \right)$ $I_y = \frac{1}{12} m \left(A^2 + \frac{2}{3} C^2 \right)$ $I_z = \frac{1}{12} m \left(A^2 + \frac{B^2}{2} \right)$ $G = \frac{C}{3}$		$m = \frac{1}{2} ABC \rho$ $I_x = \frac{1}{36} m (B^2 + C^2)$ $I_y = \frac{1}{12} m \left(A^2 + \frac{2}{3} C^2 \right)$ $I_z = \frac{1}{12} m \left(A^2 + \frac{2}{3} B^2 \right)$ $G_1 = \frac{C}{3} \quad G_2 = \frac{B}{3}$

◆ Example of specific gravity

The following table shows informative values of specific gravity. Please check actual specific gravities of materials individually.


Material	Specific gravity	Material	Specific gravity	Material	Specific gravity
SUS304	7.93	Aluminum	2.70	Epoxy resin	1.90
S45C	7.86	Duralumin	2.80	ABS	1.10
SS400	7.85	Silicone	2.30	Silicone resin	1.80
Cast iron	7.19	Quartz glass	2.20	Urethane rubber	1.25
Copper	8.92	Teflon	2.20		
Brass	8.50	Fluorine resin	2.20		

(2) When center of revolution and line of center of gravity do not match

Moment of inertia when axis of center of gravity and axis of revolution of an inertia field do not match is calculated by the following formula.

$$I = I_g + mF^2$$

- I: Moment of inertia when axis of center of gravity and axis of revolution do not match (kgm²)
- I_g: Moment of inertia when axis of center of gravity and axis of revolution match (kgm²)
Calculated by formula shown in (1) in accordance with shape.
- m: Mass (kg)
- F: Distance between axis of revolution and axis of center of gravity (m)

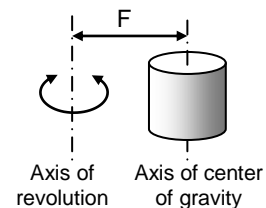

(3) Moment of inertia of linear motion object


The moment of inertia converted into an FHA-C actuator axis of a linear motion object driven by a screw is calculated by the following formula.

$$I = m \left(\frac{P}{2\pi} \right)^2$$


- I: Moment of inertia converted into actuator axis of a linear motion object (kgm²)
- m: Mass (kg)
- P: Amount of linear movement per revolution of actuator (m/rev)

2. Moment of inertia of circular cylinder

Approximate values of moment of inertia of circular cylinder can be calculated from the graph on the right.

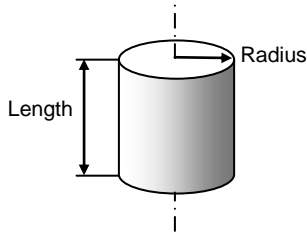

The top graph is applied to aluminum (specific gravity 2.7) and the bottom graph, to steel (specific gravity 7.85).

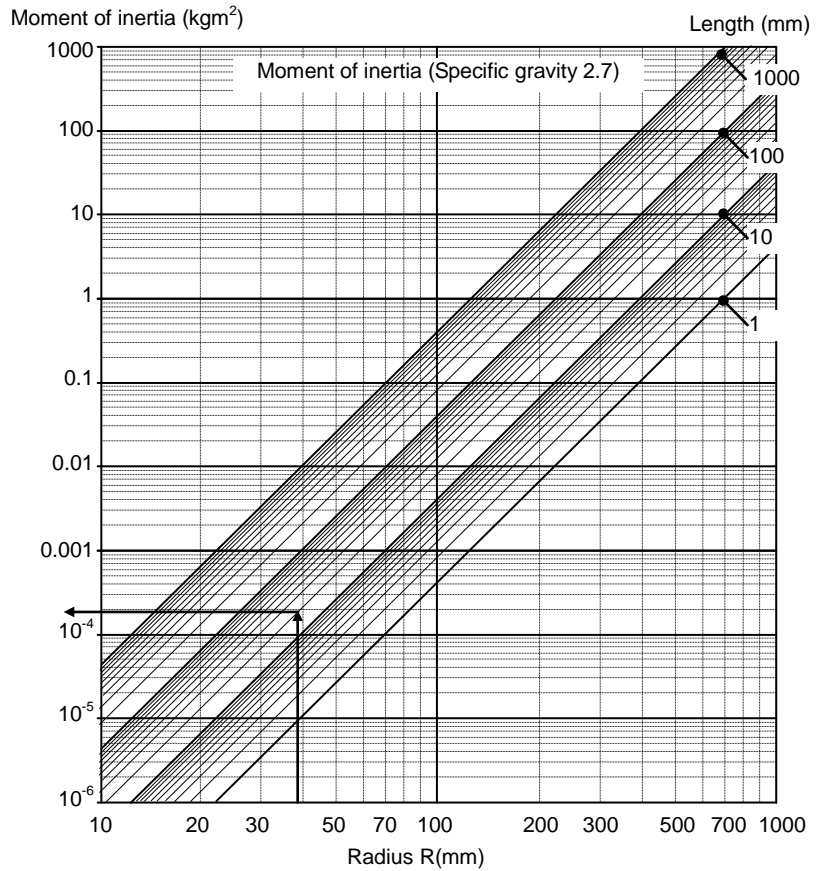


(Example)

Material: Aluminum
 Outside diameter: 100mm
 Length: 7mm
 Shape: Circular cylinder
 Outside diameter: 100mm

Since the outside diameter is 100mm, the radius is 50mm.
 Based on the top graph, moment of inertia is about $1.9 \times 10^{-4} \text{ kgm}^2$.

(Calculated value: 0.000186 kgm^2)

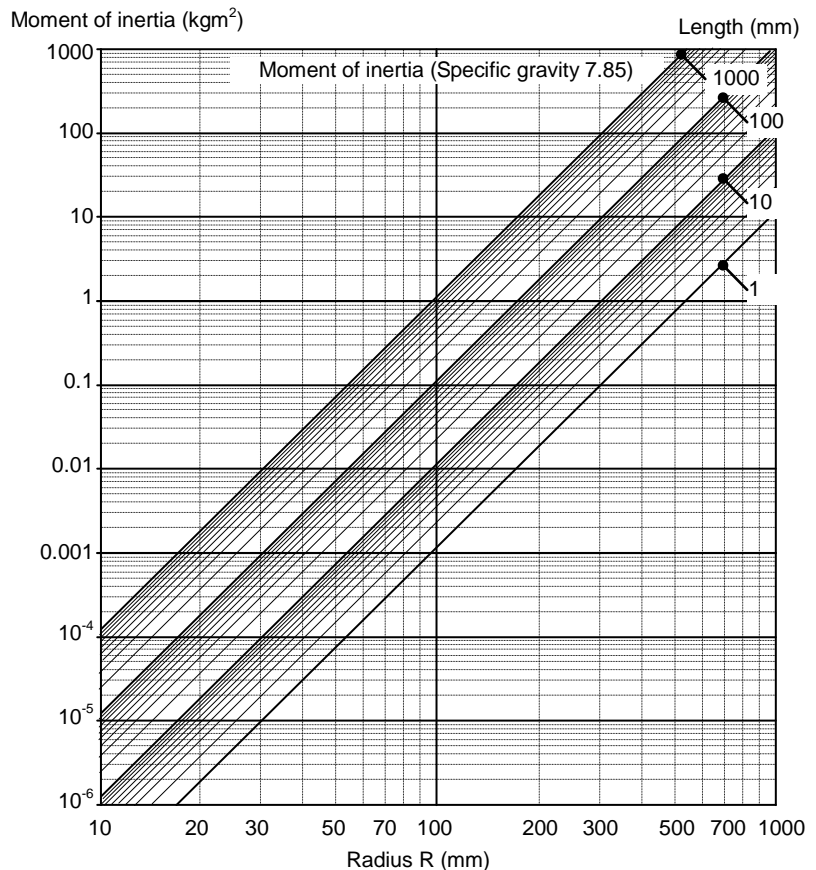

(6) Angle

SI unit	rad		
Unit	Deg.	Min.	Sec.
Coefficient	57.3	3.44×10^3	2.06×10^5

Unit	Deg.	Min.	Sec.
Coefficient	0.01755	2.93×10^{-4}	4.88×10^{-6}
SI unit	rad		

(7) Angular speed

SI unit	rad/s			
Unit	Deg./s	Deg./min	r/s	r/min
Coefficient	57.3	3.44×10^3	0.1592	9.55

Unit	Deg./s	Deg./min	r/s	r/min
Coefficient	0.01755	2.93×10^{-4}	6.28	0.1047
SI unit	rad/s			

(8) Angular acceleration

SI unit	rad/s ²	
Unit	Deg./s ²	Deg./min ²
Coefficient	57.3	3.44×10^3

Unit	Deg./s ²	Deg./min ²
Coefficient	0.01755	2.93×10^{-4}
SI unit	rad/s ²	

(9) Torque

SI unit	Nm			
Unit	kgfm	lbft	lbin	ozin
Coefficient	0.102	0.738	8.85	141.6

Unit	kgfm	lbft	lbin	ozin
Coefficient	9.81	1.356	0.1130	7.06×10^{-3}
SI unit	Nm			

(10) Moment of inertia

SI unit	kgm ²							
Unit	kgfms ²	kgfcms ²	lbft ²	lbfts ²	lbin ²	lbins ²	ozin ²	ozins ²
Coefficient	0.102	10.2	23.73	0.7376	3.42×10^3	8.85	5.47×10^4	141.6

Unit	kgfms ²	kgfcms ²	lbft ²	lbfts ²	lbin ²	lbins ²	ozin ²	ozins ²
Coefficient	9.81	0.0981	0.0421	1.356	2.93×10^{-4}	0.113	1.829×10^{-5}	7.06×10^{-3}

SI unit	kgm ²							
---------	------------------	--	--	--	--	--	--	--

(11) Torsional spring constant, moment of rigidity

SI unit	Nm/rad				
Unit	kgfm/rad	kgfm/arc min	kgfm/Deg.	lbft/Deg.	lbin/Deg.
Coefficient	0.102	2.97×10^{-5}	1.78×10^{-3}	0.0129	0.1546

Unit	kgfm/rad	Kgfm/arc min	kgfm/Deg.	lbft/Deg.	lbin/Deg.
Coefficient	9.81	3.37×10^4	562	77.6	6.47

SI unit	Nm/rad				
---------	--------	--	--	--	--

Warranty Period and Terms

The RSF-B mini series actuators are warranted as follows:

■ Warranty period

Under the condition that the actuator are handled, used and maintained properly followed each item of the documents and the manuals, all the RSF B mini series actuators are warranted against defects in workmanship and materials for the shorter period of either one year after delivery or 2,000 hours of operation time.

■ Warranty terms

All the RSF B mini series actuators are warranted against defects in workmanship and materials for the warranted period. This limited warranty does not apply to any product that has been subject to:

- (1) user's misapplication, improper installation, inadequate maintenance, or misuse.
- (2) disassembling, modification or repair by others than Harmonic Drive Systems, Inc.
- (3) imperfection caused by the other than the RSF B mini series actuator and the HA-655/675/680 servo driver.
- (4) disaster or others that does not belong to the responsibility of Harmonic Drive Systems, Inc.

Our liability shall be limited exclusively to repairing or replacing the product only found by Harmonic Drive Systems, Inc. to be defective. Harmonic Drive Systems, Inc. shall not be liable for consequential damages of other equipment caused by the defective products, and shall not be liable for the incidental and consequential expenses and the labor costs for detaching and installing to the driven equipment.



Certified to ISO14001 (HOTAKA Plant) / ISO9001 (TÜV Management Service GmbH)
All specifications and dimensions in this manual subject to change without notice.

<http://www.hds.co.jp>

	<p>Head Office / Believe Omori 7F 6-25-3Minami-Ohi, Shinagawa-ku, Tokyo, Japan 〒140-0013 TEL+81(0)3-5471-7800 FAX+81(0)3-5471-7811</p> <p>Overseas Division / 1856-1 Hotakamaki Azumino-shi Nagano, Japan 〒399-8305 TEL+81(0)263-83-6935 FAX+81(0)263-83-6901</p> <p>HOTAKA Plant / 1856-1 Hotakamaki Azumino-shi Nagano, Japan 〒399-8305 TEL+81(0)263-83-6800 FAX+81(0)263-83-6901</p> <p>Harmonic Drive AG / Hoenbergstraße 14, 65555 Limburg, Germany TEL06431-5008-0 FAX06431-5008-18</p> <p>Harmonic Drive L.L.C / 247 Lynnfield Street, Peabody, MA, 01960, U.S.A. TEL+1- 978-532-1800 FAX+1- 978-532-9406</p>
--	--



Deutschland
Harmonic Drive AG
Hoenbergstraße 14
65555 Limburg/Lahn

T +49 6431 5008-0
F +49 6431 5008-119

info@harmonicdrive.de
www.harmonicdrive.de



Subject to technical changes.